



Hardware Guide

HP Notebook Series

Document Part Number: 355386-001

November 2003

This guide explains how to identify and use notebook hardware features, including connectors for external devices. It also includes power and environmental specifications, which might be helpful when traveling with the notebook.

© 2003 Hewlett-Packard Development Company, L.P.

Microsoft® and Windows® are U.S. registered trademarks of Microsoft Corporation. SD Logo is a trademark of its proprietor. Bluetooth® is a trademark owned by its proprietor and used by Hewlett-Packard Company under license.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

Hardware Guide

HP Notebook Series

First Edition November 2003

Reference Number: zx5000/zv5000/nx9100/nx9105/nx9110

Document Part Number: 355386-001

Contents

1 Hardware Components

Identifying Parts of the Notebook	1-1
Display	1-1
TouchPad	1-3
Top Components	1-5
Power Lights	1-5
Keyboard and Drive Lights	1-7
Power and Volume Controls	1-9
Quick Launch Buttons and Keyboard Keys	1-11
Wireless On/Off Button and Application Keys	1-13
Function and Keypad Keys	1-14
Front Components	1-16
Rear Components	1-20
Left-Side Components	1-22
Right-Side Components	1-26
Bottom Components	1-30
Labels	1-32
Additional Standard Components	1-33
Documentation Library CD	1-33
Cords, Cables and Adapters	1-34

2 TouchPad and Keyboard

Using the TouchPad	2-1
Setting TouchPad Preferences	2-4
Using the Hotkeys	2-5
Hotkey Quick Reference	2-7

Hotkey Procedures	2-8
Hotkey Commands	2-8
Using Quick Launch Buttons	2-11
Reprogramming the Quick Launch Buttons	2-12
Keypad	2-13
Using the Keypad	2-13

3 Battery Packs

Running the Notebook on Battery Power	3-1
Inserting or Removing the Battery Pack	3-2
Charging a Battery Pack	3-4
Obtaining Accurate Charge Information	3-5
Accessing the Battery Charge Display	3-5
Placing the Power Meter Icon on the Taskbar	3-6
Managing Low-Battery Conditions	3-6
Identifying a Low-Battery Condition	3-6
Identifying a Critical Low-Battery Condition	3-6
Verifying Hibernation Settings	3-7
Resolving Low-Battery Conditions	3-7
Calibrating a Battery Pack	3-8
When to Calibrate	3-8
How to Calibrate	3-8
Battery Conservation Procedures and Settings	3-10
Conserving Power as You Work	3-10
Storing a Battery Pack	3-11
Disposing of a Used Battery Pack	3-12
Finding More Power Information	3-12

4 Drives

About Drive Terms	4-1
Caring for Drives and Drive Media	4-3
Caring for Drives	4-3
Caring for Drive Media	4-4

Using Drive Media	4-4
Avoiding Standby and Hibernation	4-4
Displaying Media Contents	4-5
Adding a Drive to the System	4-6
Using the IDE Drive Light	4-7
Inserting and Removing Drive Media	4-8
Inserting a CD or DVD	4-8
Removing a CD or DVD (With Power)	4-10
Removing a CD or DVD (Without Power)	4-12
Inserting a Diskette (Select Models)	4-14
Removing a Diskette (Select Models)	4-15
Installing an Optional HP USB Digital Drive (Select Models)	4-16
Installing an Optional SD Memory Card	4-17
Connecting an Optional Digital Drive to the USB Port	4-18
Inserting an Optional Digital Drive into an Optional Digital Bay	4-22
Removing an Optional Digital Drive from an Optional Digital Bay	4-24
Finding Optional Drive Software Information	4-25

5 Audio and Video

Adjusting Volume	5-1
Using the Volume Buttons	5-1
Using the Volume Control Icon	5-2
Using the Internal Speakers	5-3
Connecting an Audio Device	5-4
Identifying Audio Jacks	5-4
Using the Microphone Jack	5-5
Using the Audio-Out Jack	5-6
Connecting an S-Video Device	5-7
Connecting the Audio	5-7
Turning a Video Device On and Off	5-9
Changing the Color Television Format	5-9

6 External Device Connections

Connecting a Standard Device	6-1
Connecting a USB Device	6-2
Using a USB Device	6-3
Linking to an Infrared Device (Select Models)	6-4
Setting Up an Infrared Transmission	6-5
Avoiding Standby While Using Infrared	6-6
Connecting an Optional Cable Lock	6-7

7 Modem and Network Connections

Using the Modem (Select Models)	7-1
Connecting the Modem to an RJ-11 Jack	7-3
Connecting the Modem with an Adapter	7-5
Special Restrictions in Certain Countries	7-6
Changing Your Modem Settings	7-6
Connecting to a Local Area Network (LAN)	7-7
Turning a Network Connection Off and On	7-9
Making Wireless Network Connections (Select Models)	7-10
Turning Wireless Communication On and Off	7-12
Connecting to a Wireless Network	7-14
Checking the Wireless Connection Status	7-14
Making Bluetooth Wireless Connections (Select Models)	7-15

8 Hardware Upgrades

Obtaining Upgrades	8-1
Using PC Cards	8-2
Selecting a PC Card	8-2
Configuring a PC Card	8-2
Inserting a PC Card	8-3
Stopping and Removing a PC Card	8-5

Using Digital Media Cards (Select Models)	8-6
Inserting an Optional Digital Media Card	8-7
Removing an Optional Digital Media Card	8-9
Disabling an Optional Digital Media Card	8-10
Increasing Memory	8-11
Displaying Memory Information	8-11
Removing or Inserting a Memory Module	8-12
Replacing the Hard Drive	8-21
Finding More Upgrade Information	8-28

9 Specifications

Operating Environment	9-1
Rated Input Power	9-2

Index

Hardware Components

Identifying Parts of the Notebook

Components included with the notebook vary by geographical region and by model. This guide includes illustrations for the different models and features. In each section, refer to the illustrations that closely match your notebook.

The illustrations in Chapter 1 identify the standard external features included in most notebook models.

Display



Component	Description
Display release latch	Opens the notebook.




Component	Description
Display release latch	Opens the notebook.

TouchPad



Component	Description
❶ TouchPad*	Moves the pointer and selects or activates items on the screen.
❷ Left and right TouchPad buttons	Function like the left and right buttons of an external mouse.
❸ TouchPad scroll pad	Functions like the wheel of an external mouse for scrolling up and down.
❹ TouchPad on/off button	Turns TouchPad on or off.
❺ TouchPad light	On: TouchPad is enabled.

*For information about TouchPad settings, see Chapter 2, [“TouchPad and Keyboard.”](#)

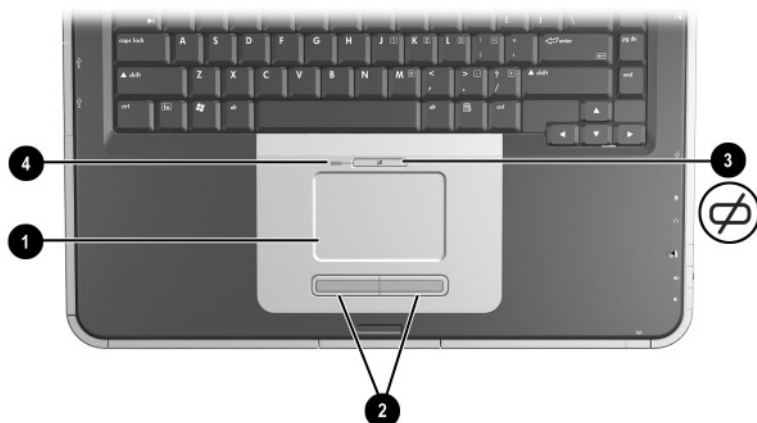

Component	Description
① TouchPad*	Moves the pointer and selects or activates items on the screen.
② Left and right TouchPad buttons	Function like the left and right buttons on an external mouse.
③ TouchPad on/off button	Turns TouchPad on or off.
④ TouchPad light	On: TouchPad is enabled.


*For information about TouchPad settings, see Chapter 2, “[TouchPad and Keyboard](#).”

Top Components

Power Lights




Component	Description
❶ Power button light	On: Notebook is turned on. Blinking: Notebook is in Standby. Off: Notebook is off or in Hibernation.
❷ Power/Standby light	On: Notebook is turned on. Blinking: Notebook is in Standby. Off: Notebook is off or in Hibernation.
❸ Battery light	On: Battery pack is charging. Blinking: Battery pack has reached a low-battery condition. Off: AC power is applied, with battery pack either fully charged or not installed, or no AC power is applied.

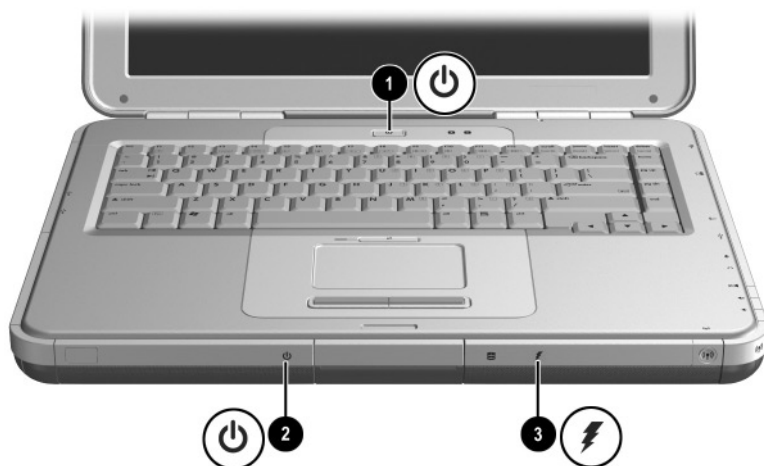


Component	Description
❶ Power button light	On: Notebook is turned on. Blinking: Notebook is in Standby. Off: Notebook is off or in Hibernation.
❷ Power/Standby light	On: Notebook is turned on. Blinking: Notebook is in Standby. Off: Notebook is off or in Hibernation.
❸ Battery light	On: Battery pack is charging. Blinking: Battery pack has reached a low-battery condition. Off: AC power is applied, with battery pack either fully charged or not installed, or no AC power is applied.

Keyboard and Drive Lights

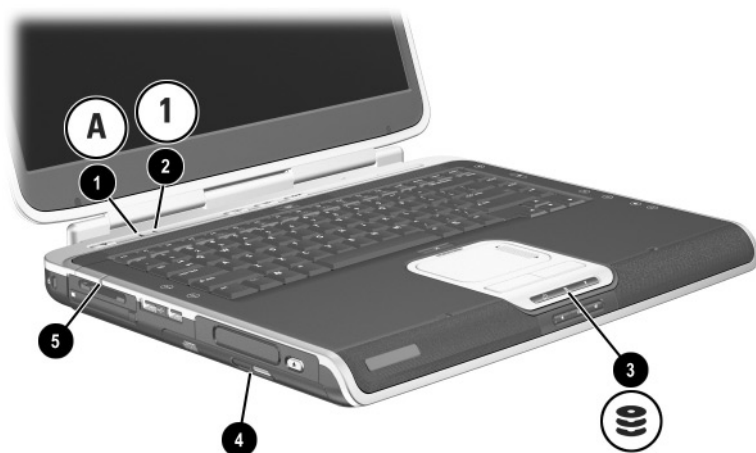

Component	Description
① Caps lock light	On: Caps lock is on.
② Num lock light	On: Num lock or the internal keypad is on.*
③ IDE (Integrated Drive Electronics) light; also referred to as hard drive/optical drive activity light	On: The internal hard drive or optical drive bay is being accessed.
④ Optical disk drive light	On: The optical drive bay is being accessed.
⑤ 5-in-1 Digital Media slot light (select models).	On: Slot is accessing an optional digital media card.

*For information about using num lock, the internal keypad, or an external keypad, see Chapter 2, [“TouchPad and Keyboard.”](#)

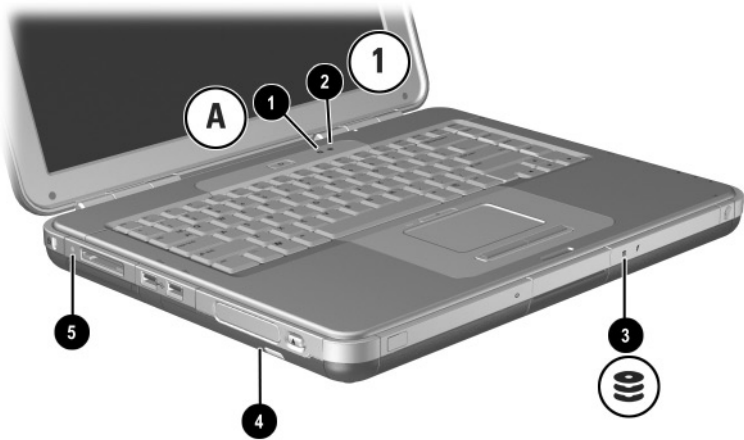


Component	Description
❶ Caps lock light	On: Caps lock is on.
❷ Num lock light	On: Num lock or the internal keypad is on.*
❸ IDE (Integrated Drive Electronics) light; also referred to as hard drive/optical drive activity light	On: The internal hard drive or the optical drive bay is being accessed.
❹ Optical disk drive light	On: The optical drive bay is being accessed.
❺ 5-in-1 Digital Media slot light (select models)	On: Slot is accessing an optional digital media card.


*For information about using num lock, the internal keypad, or an external keypad, see Chapter 2, [“TouchPad and Keyboard.”](#)


Power and Volume Controls



Component	Description
❶ Power button*	<p>When the notebook is:</p> <ul style="list-style-type: none"> ■ Off, press the button to turn on the notebook. ■ On, briefly press the button to initiate Hibernation. ■ In Standby, briefly press the button to resume from Standby. ■ In Hibernation, briefly press the button to resume from Hibernation. <p> If the system has stopped responding and Windows shutdown procedures cannot be used, press and hold the button for at least 4 seconds to turn off the notebook.</p>
❷ Volume buttons (3)	<p>Decrease, mute, and increase the system volume:</p> <ul style="list-style-type: none"> ■ To decrease volume, use the left button. ■ To mute or restore volume, use the middle button. ■ To increase volume, use the right button.

*This table describes default settings. For information about changing the function of the power button, refer to the “Power” chapter in the *Software Guide* on this CD.

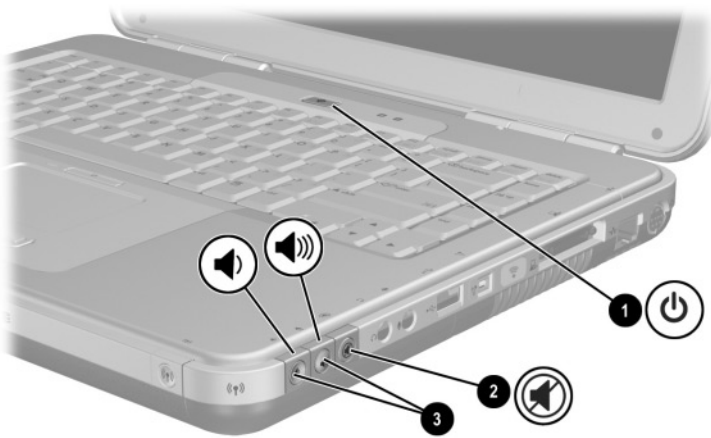


Component	Description
❶ Power button*	<p>When the notebook is:</p> <ul style="list-style-type: none">■ Off, press the button to turn on the notebook.■ On, briefly press the button to initiate Hibernation.■ In Standby, briefly press the button to resume from Standby.■ In Hibernation, briefly press the button to resume from Hibernation. <p> If the system has stopped responding and Microsoft® Windows® shutdown procedures cannot be used, press and hold the button for at least 4 seconds to turn off the notebook.</p>
❷ Mute button	On: Audio is muted.
❸ Volume buttons (2)	<p>Decrease and increase the system volume:</p> <ul style="list-style-type: none">■ To decrease volume, use the left button.■ To increase volume, use the right button.


*This table describes default settings. For information about changing the function of the power button, refer to the “Power” chapter in the *Software Guide* on this CD.

Quick Launch Buttons and Keyboard Keys





Component	Description
1 Quick Launch buttons: Picture, Media, and Internet	<p>From left to right: 3 programmable buttons enable you to access the My Pictures folder, a multimedia application, and the Internet with one keystroke.</p> <p>The icon on each button represents the default destination. Buttons can be programmed to point to other locations.</p> <p> See the instructions on changing the destination of Quick Launch buttons in Chapter 2, “TouchPad and Keyboard.”</p>

(continued)


②	Wireless On/Off button	Enables wireless functionality, but does not create a wireless connection.
		 To set up and complete a wireless connection, additional hardware and software might be required.
③	Windows logo key	Displays Windows Start menu.
④	Windows Applications key	Displays shortcut menu for any highlighted items.

Wireless On/Off Button and Application Keys

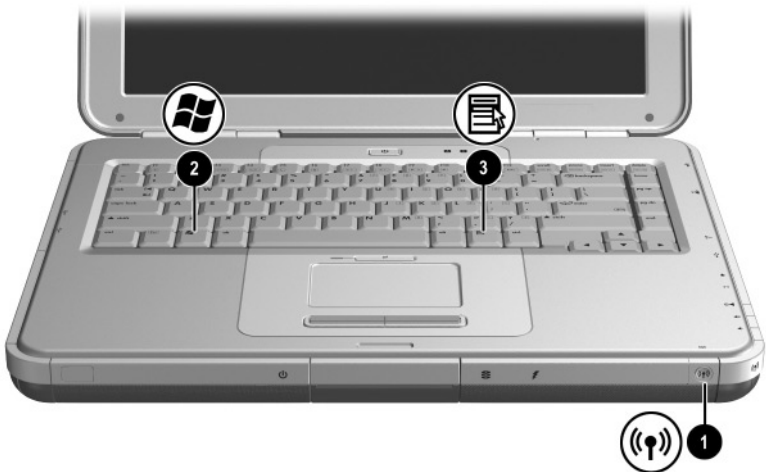


Component	Description
❶ Wireless On/Off button	Enables wireless functionality, but does not create a wireless connection.  To set up and complete a wireless connection, additional hardware and software might be required.
❷ Windows logo key	Displays Windows Start menu.
❸ Windows Applications key	Displays shortcut menu for any highlighted items.

Function and Keypad Keys

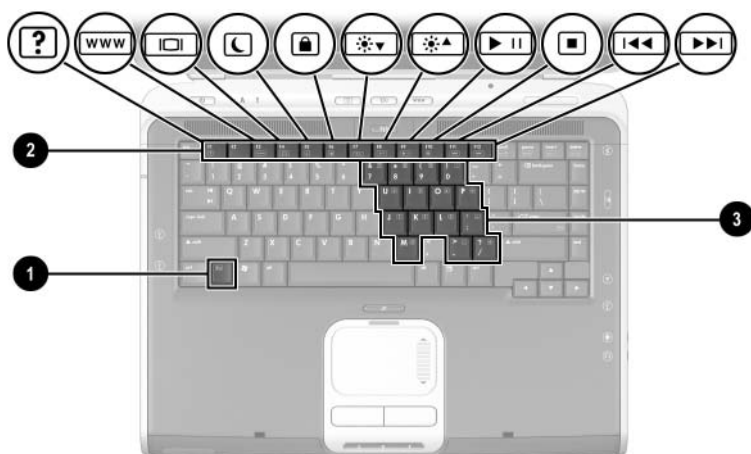

Component	Description
❶ Fn key	Combines with the function keys to perform additional system and application tasks. For example, pressing Fn+F8 increases screen brightness.
❷ Function keys (11)*	Perform system and application tasks. When combined with the Fn key, function keys F1 through F12 perform additional tasks as hotkeys. (The F2 function key is not used.)
❸ Keypad keys (15)	Can be used like the keys on an external numeric keypad.


*For more information, refer to the [“Hotkey Quick Reference”](#) section in Chapter 2, “TouchPad and Keyboard.”

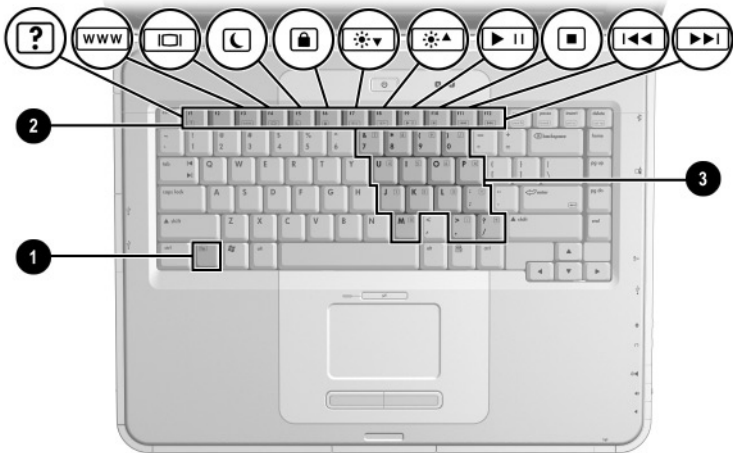

Component	Description
❶ Fn key	Combines with the function keys to perform additional system and application tasks. For example, pressing Fn+F8 increases screen brightness.
❷ Function keys (11)*	Perform system and application tasks. When combined with the Fn key, function keys F1 through F12 perform additional tasks as hotkeys. (The F2 function key is not used.)
❸ Keypad keys (15)	Can be used like the keys on an external numeric keypad.

*For more information, refer to the [“Hotkey Quick Reference”](#) section in Chapter 2, “TouchPad and Keyboard.”


Front Components

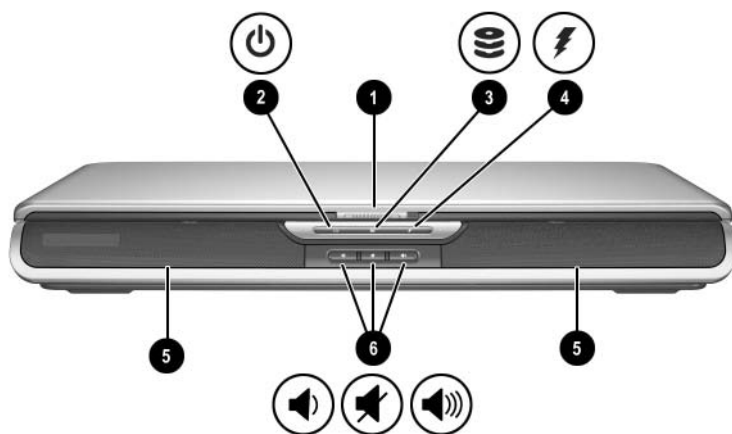


Component	Description
❶ Display release latch	Opens the notebook.
❷ Power/Standby light	On: Notebook is turned on. Blinking: Notebook is in Standby. Off: Notebook is off or in Hibernation.
❸ IDE (Integrated Drive Electronics) light; also referred to as hard drive/optical drive activity light	On: The internal hard drive or optical drive bay is being accessed.

(continued)


④ Battery light	On: Battery pack is charging. Blinking: Battery pack has reached a low-battery condition. Off: AC power is applied, with battery pack either fully charged or not installed, or no AC power is applied.
⑤ Stereo speakers (2)	Produce stereo sound.
⑥ Volume and mute buttons (3)	Decrease, mute, and increase the system volume: <ul style="list-style-type: none"><li data-bbox="532 503 904 560">■ To decrease volume, use the left button.<li data-bbox="532 568 904 625">■ To mute or restore volume, use the middle button.<li data-bbox="532 633 904 690">■ To increase volume, use the right button.

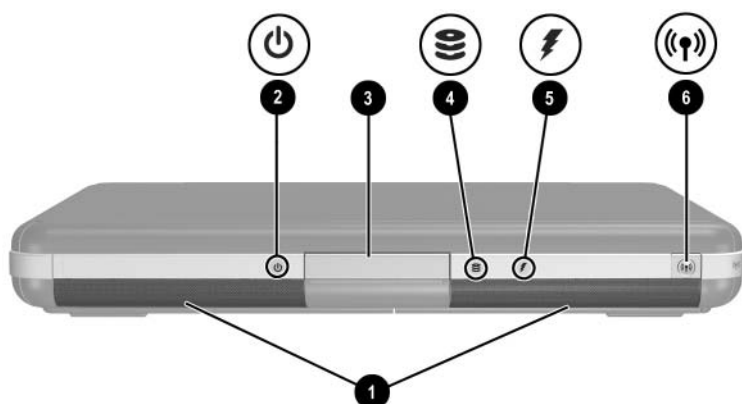


Component	Description
① Stereo speakers (2)	Produce stereo sound.
② Power/Standby light	On: Notebook is turned on. Blinking: Notebook is in Standby. Off: Notebook is off or in Hibernation.
③ Display release latch	Opens the notebook.
④ IDE (Integrated Drive Electronics) light; also referred to as hard drive/optical drive activity light	On: The internal hard drive or optical drive bay is being accessed.

5 Battery light	On: Battery pack is charging. Blinking: Battery pack has reached a low-battery condition. Off: AC power is applied, with battery pack either fully charged or not installed, or no AC power is applied.
6 Wireless On/Off button	Enables wireless functionality, but does not create a wireless connection.  To set up and complete a wireless connection, additional hardware and software might be required.

Rear Components

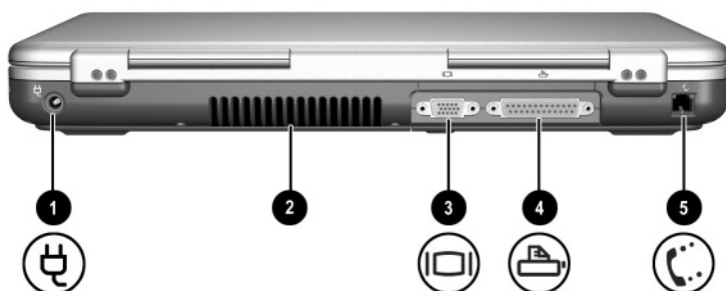



Component	Description
❶ Power connector	Connects an AC adapter.
❷ Exhaust vent	Allows airflow to cool internal components. Additional vents are on the bottom of the notebook. ⚠ To prevent overheating, do not obstruct the vent. Do not allow a hard surface, such as an adjoining printer, or a soft surface, such as bedding or clothing, to block airflow.
❸ External monitor connector	Connects an optional external monitor or overhead projector.
❹ Parallel connector	Connects an optional parallel device, such as a printer.
❺ RJ-11 jack	Connects the modem cable.

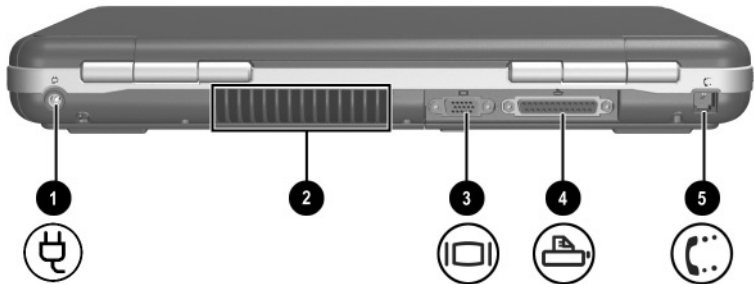

Component	Description
❶ Power connector	Connects an AC adapter.
❷ Exhaust vent	<p>Allows airflow to cool internal components. Additional vents are on the bottom of the notebook.</p> <p>△ To prevent overheating, do not obstruct the vent. Do not allow a hard surface, such as an adjoining printer, or a soft surface, such as bedding or clothing, to block airflow.</p>
❸ External monitor connector	Connects an optional external monitor or overhead projector.
❹ Parallel connector	Connects an optional parallel device, such as a printer.
❺ RJ-11 jack (select models)	Connects the modem cable. (select models)


Left-Side Components

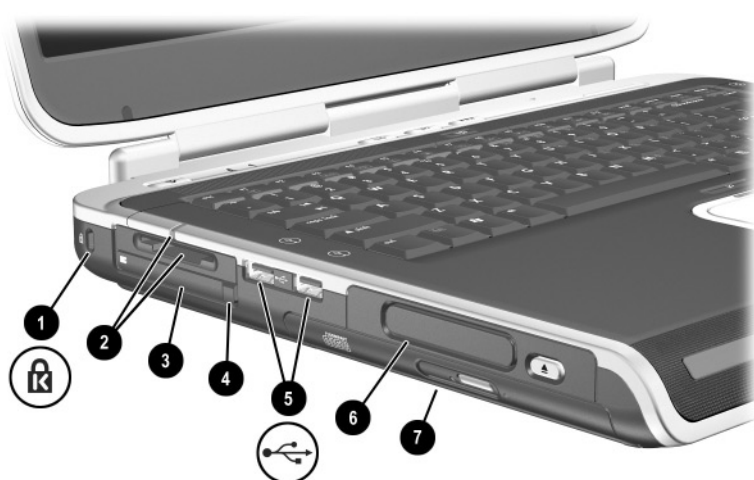


Component	Description
❶ Security cable slot	Attaches an optional security cable to the notebook.  The purpose of security solutions is to act as a deterrent. These solutions do not prevent the product from being mishandled or stolen.
❷ 5-in-1 Digital Media slot and light (select models)	Supports 5 optional digital media formats: SD Memory Card, MultiMediaCard, SmartMedia, Memory Stick, and Memory Stick Pro. Light On: Slot is accessing digital media.
❸ PC Card slot	Supports an optional Type I or Type II 32-bit (CardBus) or 16-bit PC Card.
❹ PC Card eject button	Ejects an optional PC Card from the PC Card slot.

(continued)

5	USB connectors (2)	Connect optional USB device, such as printers.
6	Three drive configurations: optional Digital Bay, optional diskette drive, no drive	<p>Digital Bay: Supports optional pocket-sized HP USB Digital Drive.</p> <p>Diskette drive: Supports standard 1.4-MB diskette.</p> <p>No drive: No drive is installed.</p>
7	One of 4 optical drive bay configurations	<ul style="list-style-type: none"> ■ CD-ROM drive ■ DVD-ROM drive ■ DVD/CD-RW combo drive—Can write to recordable CDs, but cannot write to recordable DVDs. (Type of drive varies by model.) ■ DVD+RW/R and CD-RW combo drive—Can write to both recordable CDs and DVDs.

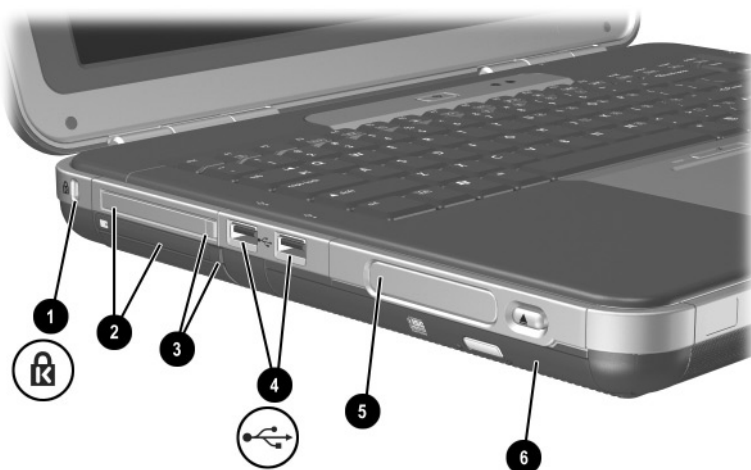


Component	Description
❶ Security cable slot	Attaches an optional security cable to the notebook.  The purpose of security solutions is to act as a deterrent. These solutions do not prevent the product from being mishandled or stolen.
❷ PC Card slot (1 or 2 slots, select models)	Supports an optional Type I or Type II 32-bit (CardBus) or 16-bit PC Card.
❸ PC Card eject button (1 or 2 buttons, select models)	Ejects an optional PC Card from the PC Card slot.

(continued)

④ USB connectors (2)	Connect optional USB devices, such as printers.
⑤ Three drive configurations: optional Digital Bay, optional diskette drive, no drive	Digital Bay: Supports optional pocket-sized HP USB Digital Drive. Diskette drive: Supports standard 1.4-MB diskette. No drive: No drive is installed.
⑥ One of 4 optical drive bay configurations	<ul style="list-style-type: none">■ CD-ROM drive■ DVD-ROM drive■ DVD/CD-RW combo drive—Can write to recordable CDs, but cannot write to recordable DVDs. (Type of drive varies by model.)■ DVD+RW/R and CD-RW combo drive—Can write to both recordable CDs and DVDs.


Right-Side Components

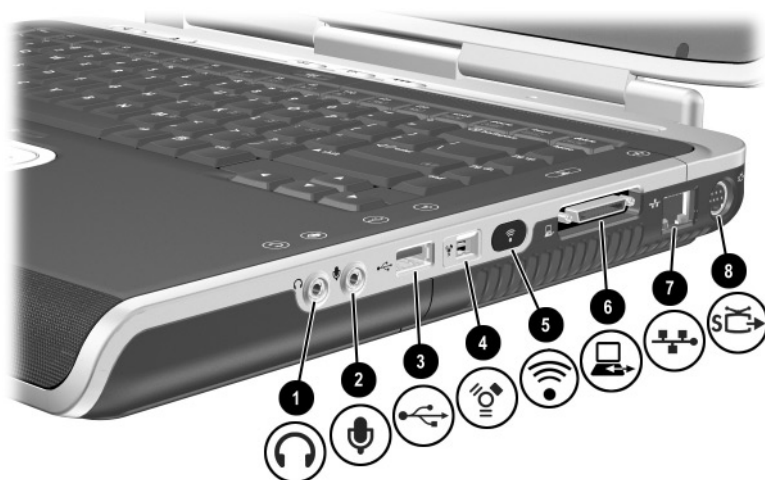

Component	Description
❶ Audio-out headphone jack	Connects an optional headphone, a headset, or powered stereo speakers. Also connects the audio function of an audio/video device, such as a television or VCR.
❷ Audio-in microphone jack	Connects an optional external microphone.
❸ USB connector	Connects an optional USB device, such as a printer.
❹ 1394 connector (select models)	Connects an optional IEEE1394 device, such as a camcorder.

(continued)

5	Infrared port (select models)	Provides wireless communication between the notebook and an optional IrDA-compliant device.
6	Expansion port	Connects an optional HP Notebook Expansion Base.
7	RJ-45 network jack	Connects an optional network cable.
8	S-Video-out jack	Connects an optional S-Video device, such as a television, VCR, camcorder, overhead projector, or video capture card.

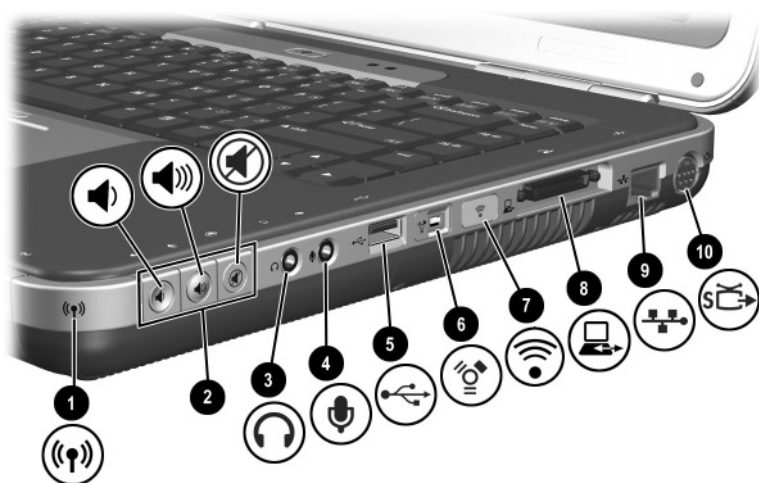


Component	Description
❶ Wireless on/off light	On: Wireless functionality is enabled, but wireless connection might not be configured. Off: No wireless device is active.
❷ Volume buttons (3) and audio mute light	Decrease, mute, and increase the system volume: <ul style="list-style-type: none"> ■ To decrease volume, use left button. ■ To increase volume, use middle button. ■ To mute or restore volume, use right button. ■ Light on: Audio is muted.
❸ Audio-out headphone jack	Connects an optional headphone, a headset, or powered stereo speakers. Also connects the audio function of an audio/video device, such as a television or VCR.


(continued)

④	Audio-in microphone jack	Connects an optional external microphone.
⑤	USB connector	Connects an optional USB device, such as a printer.
⑥	1394 connector (select models)	Connects an optional IEEE 1394 device, such as a camcorder.
⑦	Infrared port (select models)	Provides wireless communication between the notebook and an optional IrDA-compliant device.
⑧	Expansion port	Connects an optional HP Notebook Expansion Base.
⑨	RJ-45 network jack	Connects an optional network cable.
⑩	S-Video-out jack	Connects an optional S-Video device, such as a television, VCR, camcorder, overhead projector, or video capture card.

Bottom Components

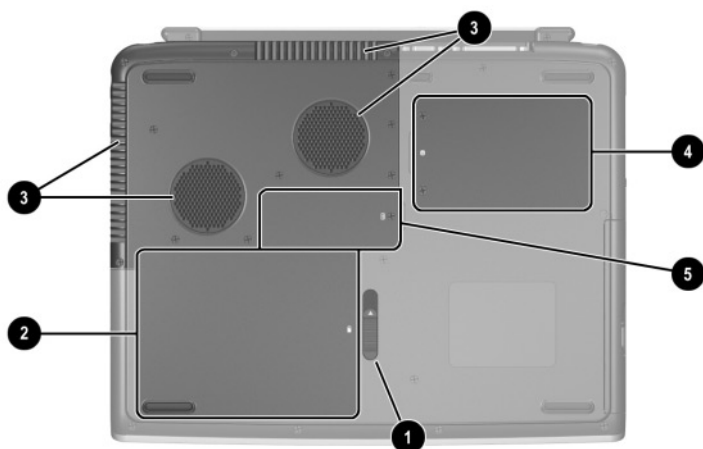

Component	Description
❶ Battery release latch	Releases the battery pack from the battery bay.
❷ Battery bay	Holds the battery pack.
❸ Exhaust vents	Allow airflow to cool internal components. △ To prevent overheating, do not obstruct the vent. Do not allow a hard surface, such as an adjoining printer, or a soft surface, such as bedding or clothing, to block airflow.
❹ Hard drive bay	Holds the primary hard drive.
❺ Memory compartment	Contains 2 memory slots, one of which is accessible for an optional 128-MB, 256-MB, 512-MB, or 1024-MB memory module upgrade. As shipped, the memory slot might be filled with a replaceable memory module, or it might be vacant, depending on the notebook model.

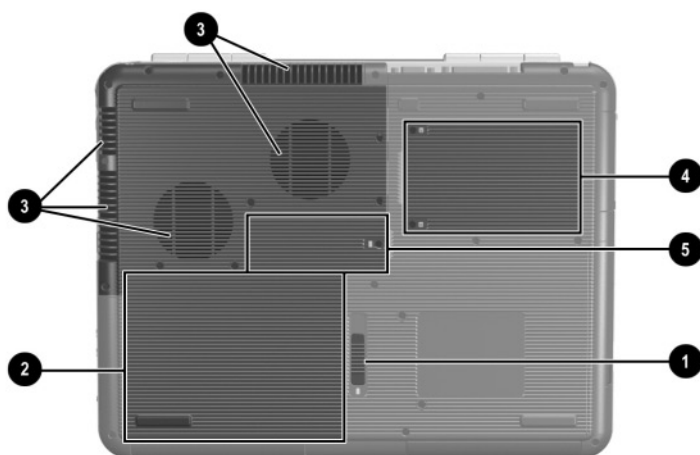

Component	Description
❶ Battery release latch	Releases the battery pack from the battery bay.
❷ Battery bay	Holds the battery pack. (Battery shipment and type vary by model.)
❸ Exhaust vents	Allow airflow to cool internal components. ⚠ To prevent overheating, do not obstruct the vent. Do not allow a hard surface, such as an adjoining printer, or a soft surface, such as bedding or clothing, to block airflow.
❹ Hard drive bay	Holds the primary hard drive.
❺ Memory compartment	Contains 2 memory slots, one of which is accessible for an optional 128-MB, 256-MB, 512-MB, or 1024-MB memory module upgrade. As shipped, the memory slot might be filled with a replaceable memory module, or it might be vacant, depending on the notebook model.

Labels

The labels affixed to the bottom of the notebook and to the inside of the battery compartment provide information you might need when troubleshooting system problems or traveling abroad with the notebook.

- The Service Tag label affixed to the bottom of the notebook contains the product name, product number (P/N), and serial number (S/N). You will need the notebook serial number and product number if you call customer support.
- The Microsoft Certificate of Authenticity label affixed to the bottom of the notebook contains the Product Key. You might need this number to update or troubleshoot problems with the operating system.
- The System label affixed to the inside of the battery compartment provides regulatory information about the notebook.
- The Product identification label affixed to the inside of the battery compartment contains the serial number (S/N) of the notebook and a code describing the original configuration of the notebook.
- The Modem approval label affixed to an optional internal modem provides regulatory information.
- The wireless certification labels affixed to the inside of the battery compartment are specific to various types of optional wireless devices. These labels provide regulatory information and list the countries in which the optional wireless devices have been approved for use. You might need the wireless device information in order to use the wireless device while traveling.

Additional Standard Components

The components included with the notebook vary by geographic region and by model. The following illustrations and tables identify the standard external components included with most notebook models.


Documentation Library CD

Your notebook *Documentation Library* CD includes the following guides:

- *Hardware Guide* (the document you are viewing)
- *Software Guide*
- *Maintenance, Shipping and Travel* guide
- *Regulatory and Safety Notices*
- *Safety & Comfort Guide*
- *Troubleshooting* guide
- *Modem and Networking* guide

For information about using the *Documentation Library* CD, refer to the printed *Startup Guide* included with the notebook.

Cords, Cables and Adapters

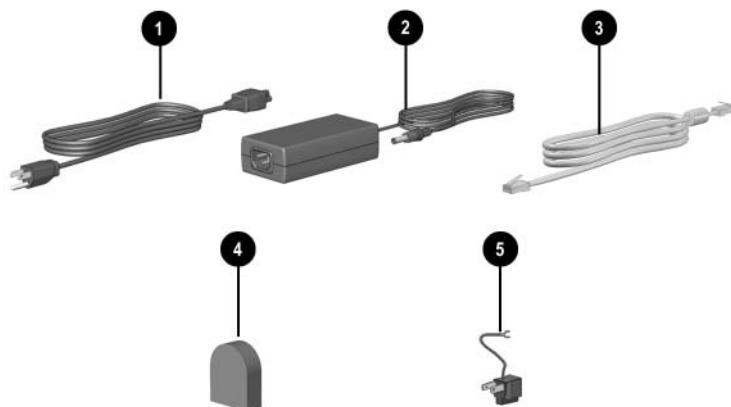

Component	Description
❶ Power cord*	Connects the AC adapter to an AC electrical outlet.
❷ AC adapter**	Converts AC power to DC power.
❸ Modem cables (select models)*	Connects the modem to an RJ-11 telephone jack or to a country-specific modem adapter.
❹ Country-specific modem adapter (included by region as required)	Adapts the modem cable to a non-RJ-11 telephone jack.
❺ Japan-specific outlet adapter (Japan only)	Connects the AC adapter to a 2-prong electrical outlet.

*Power cords and modem cables vary in appearance by region.


**AC adapters vary by region.

TouchPad and Keyboard


Using the TouchPad

The TouchPad duplicates the functions of an optional external mouse.

- To move the pointer, slide your finger across the TouchPad surface ❶ in the direction you want to move the cursor.
 - ✎ If the cursor continues to move after you take your finger off the TouchPad, wait a few seconds for the cursor to stop moving.
- Use the left and right TouchPad buttons ❷ as you would the left and right buttons on an external mouse.
- Use the TouchPad scroll pad ❸ as you would the arrows on the scroll bars on the edges of windows. This moves the viewing area up, down, right, and left.
- Use the TouchPad on/off button ❹ to turn off the Touchpad. This also turns off the TouchPad light ❺.

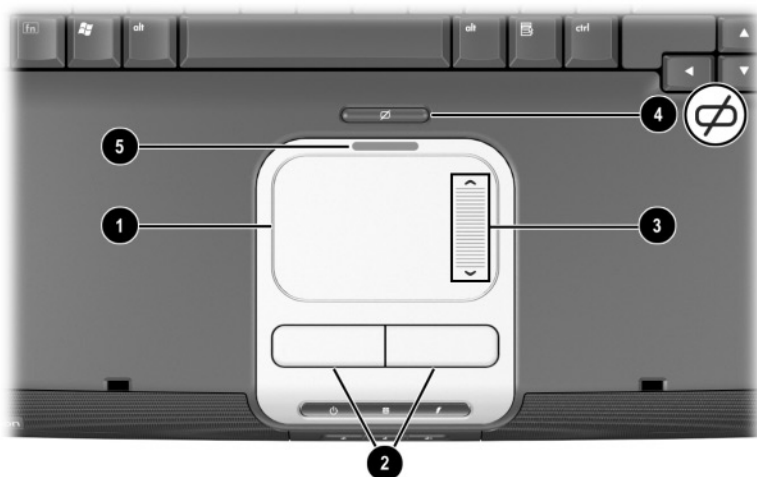

Identifying TouchPad components

- To move the pointer, slide your finger across the TouchPad surface **1** in the direction you want to move the cursor.
 -  If the cursor continues to move after you take your finger off the TouchPad, wait a few seconds for the cursor to stop moving.
- Use the left and right TouchPad buttons **2** as you would the left and right buttons on an external mouse.
- Use the TouchPad on/off button **3** to turn off the Touchpad. This also turns off the TouchPad light **4**.



Identifying TouchPad components

Setting TouchPad Preferences

The TouchPad is supported by the mouse software in the operating system. To access the Mouse Properties window, select Start > Control Panel > Printers and Other Hardware > Mouse.

Among the settings you can select are:

- **TouchPad tapping**, which enables you to tap the TouchPad once or twice to select an object.
- **Inertial Movement**, which enables you to continue to scroll even though your finger has reached the edge of the TouchPad.
- **Typing**, which prevents inadvertent tapping when typing on the keyboard.


Other features, such as sensitivity, virtual scrolling, mouse trails, and mouse speed preferences, are available in the Mouse Properties window.

Using the Hotkeys




In this guide, the function keys are capitalized (**Fn**, **F5**). The function keys on your keyboard might be lowercase (**fn**, **f5**).

Hotkeys are preset combinations of the **Fn** key ❶ and one of the function keys ❷. Excluding function key **F2**, the icons on **F1** through **F12** represent the hotkey functions available on your notebook. The **F2** function key is not used.

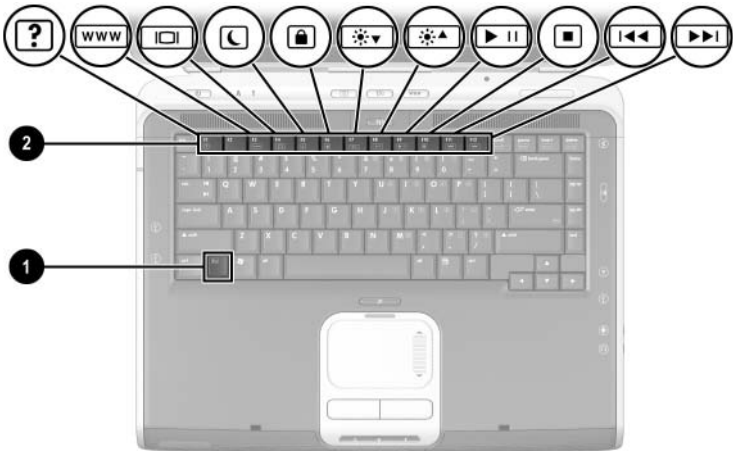

Identifying hotkeys

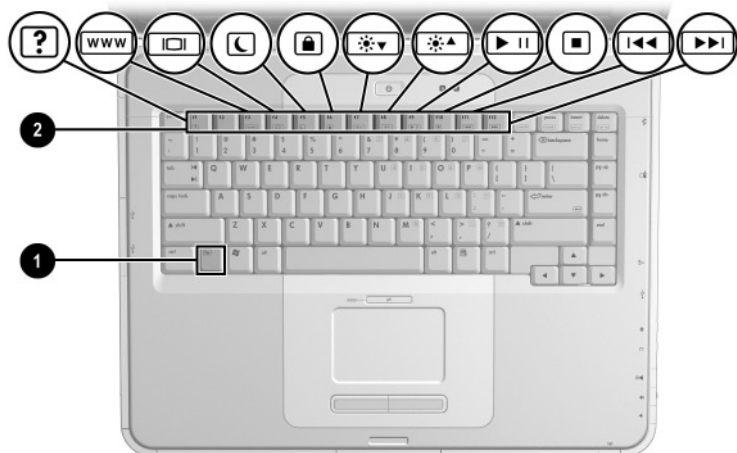

Identifying hotkeys

Hotkey Quick Reference

The following table identifies the hotkey functions set at the factory.

Default Function	Hotkey
Open Help and Support Center.	Fn+F1
Not used.	Fn+F2
Open Microsoft Internet Explorer.	Fn+F3
Switch display image.	Fn+F4
Initiate Standby.	Fn+F5
Initiate QuickLock.	Fn+F6
Decrease screen brightness.	Fn+F7
Increase screen brightness.	Fn+F8
Play, pause, or resume an audio CD or DVD.	Fn+F9
Stop an audio CD or DVD.	Fn+F10
Play the previous track or chapter of an audio CD or DVD.	Fn+F11
Play the next track of an audio CD or DVD.	Fn+F12

Hotkey Procedures

To use a hotkey command on the notebook keyboard:

- Briefly press the **Fn** key, and then briefly press the second key of the command.
- or-
- Press and hold down the **Fn** key, briefly press the second key, and then release both keys simultaneously.

Hotkey Commands

Open Help and Support Center (Fn+F1)

The Help and Support Center provides a comprehensive online resource tool for contacting an HP support specialist, for downloading the latest software driver updates and product information, and for learning more about using and maintaining your notebook.

Press the **Fn+F1** hotkey to open the Help and Support Center window.

Open Internet Explorer (Fn+F3)

Press the **Fn+F3** hotkey to open Microsoft Internet Explorer.

Switch Display Image (Fn+F4)

The **Fn+F4** hotkey switches the image among display devices connected to the notebook. For example, if an external monitor is connected to the notebook, pressing **Fn+F4** multiple times switches the image among the notebook display, the external monitor display, and a simultaneous display on both the notebook and the external monitor.

Initiate Standby (Fn+F5)

The **Fn+F5** hotkey is set by default to initiate Standby.

- When the notebook is on, press the **Fn+F5** hotkey to initiate Standby. When Standby is initiated, your work is saved in random access memory (RAM), the screen is cleared, and power is conserved. While the notebook is in Standby, the power/Standby light blinks.
- To exit Standby, briefly press the power button, or tap the TouchPad, a key on the keyboard, or other pointing device component.

The function of the **Fn+F5** hotkey, called the “sleep button” in Windows, can be changed. For example, the **Fn+F5** hotkey can be set to initiate Hibernation instead of Standby. For more information about Standby, Hibernation, and changing the function of the **Fn+F5** hotkey, see the “Power” chapter in the *Software Guide* on this CD.

Initiate QuickLock (Fn+F6)

The QuickLock operating system security feature disables the keyboard and displays the logon screen. QuickLock does not disable the TouchPad.

Before you can use this feature, you must set a Windows system password. For instructions, refer to your operating system documentation.

To initiate QuickLock, press the **Fn+F6** hotkey. To disable QuickLock, enter your Windows system password.

Decrease Screen Brightness (Fn+F7)

Press the **Fn+F7** hotkey to decrease the brightness of the notebook screen. Decreasing brightness conserves power.

Increase Screen Brightness (Fn+F8)

Press the **Fn+F8** hotkey to increase the brightness of the notebook screen.

Play, Pause or Resume an Audio CD or DVD (Fn+F9)

If an audio CD or DVD is inserted into the optical drive, press the **Fn+F9** hotkey to play it.

If an audio CD or DVD is playing in the optical drive, press the **Fn+F9** hotkey to pause it.

If you have paused an audio CD or DVD in the optical drive by pressing the **Fn+F9** hotkey, press the **Fn+F9** hotkey again to resume play.

Stop an Audio CD or DVD (Fn+F10)

If an audio CD or DVD is playing in the optical drive, press the **Fn+F10** hotkey to stop it.

Play Previous Track of an Audio CD or DVD (Fn+F11)


Press the **Fn+F11** hotkey to select the previously played track of an audio CD or DVD that is playing in the optical drive.

Play Next Track of an Audio CD or DVD (Fn+F12)

Press the **Fn+F12** hotkey to play the next track of an audio CD or DVD playing in the optical drive.

Using Quick Launch Buttons

The 3 Quick Launch buttons enable you to use a single keystroke to access default software applications or the Internet.

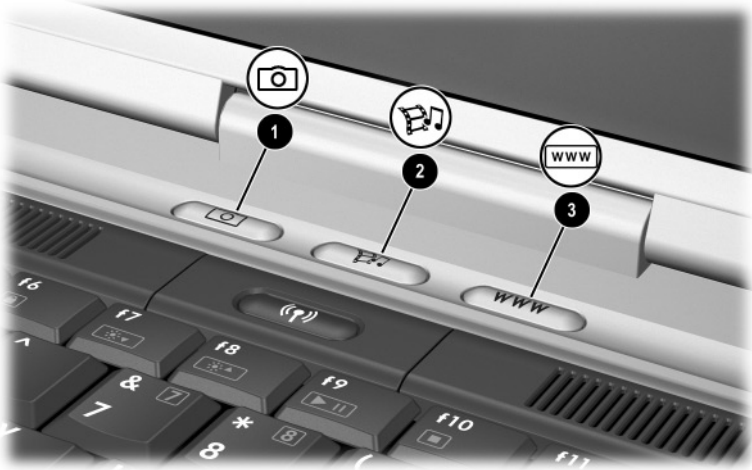

Identifying the Quick Launch buttons

Button Name	Default Assignment
❶ Picture	Opens My Pictures folder and then launches the default photo and imaging software application.
❷ Media	Launches the default multimedia software application.
❸ Internet	Opens to Microsoft Internet Explorer or to a personal Web page you can customize.

Reprogramming the Quick Launch Buttons

A Quick Launch button can be assigned to any software application, an Internet or network destination, or a data file. For example, a Quick Launch button can be assigned to open your Internet browser to a favorite Web page; to open an application, such as Microsoft Word; or to open a specific file, such as an Excel worksheet.

Button assignments can be grouped into schemes. When you select a scheme, only the button assignments within that scheme are active. Button assignments and schemes are set up, changed, or deleted in the Quick Launch buttons window.

To reprogram a button:

1. Select Start > Control Panel > Printers and Other Hardware > Quick Launch Buttons.
2. On the Settings tab, select the button you want to reprogram.
3. Type a label for the button, and then select the application, document, folder, or Web site you want the button to open.

If you want an icon for the button to appear on the taskbar or on the desktop, select that option on the Advanced tab.

Keypad

The notebook has an internal numeric keypad and supports an optional external numeric keypad or an optional external keyboard that includes a numeric keypad.

Using the Keypad

The keypad consists of 15 keys that can be used like the keys on an external keypad.

When the keypad is turned on, each key on the keypad performs the functions indicated by the icon in the top-right corner of the key.

The standard functions of the keypad keys are still available while the keypad is turned on. See [“Turning the Keypad On and Off”](#) later in this chapter.



Identifying the keypad keys



Identifying the keypad keys

Turning the Keypad On and Off


When the keypad is off, press **Fn+num lk** ❶ on the notebook to turn the keypad on. When the keypad is on, press **Fn+num lk** on the notebook (or the **num lock** key on an external keypad) to turn the keypad off.

The num lock light ❷ turns on:

- When the keypad is on
- or-
- When an optional external keypad with **num lock** turned on is connected to the system.



The keypad cannot be turned on while an optional external keypad is connected to the USB connector on an optional HP Notebook Expansion Base.

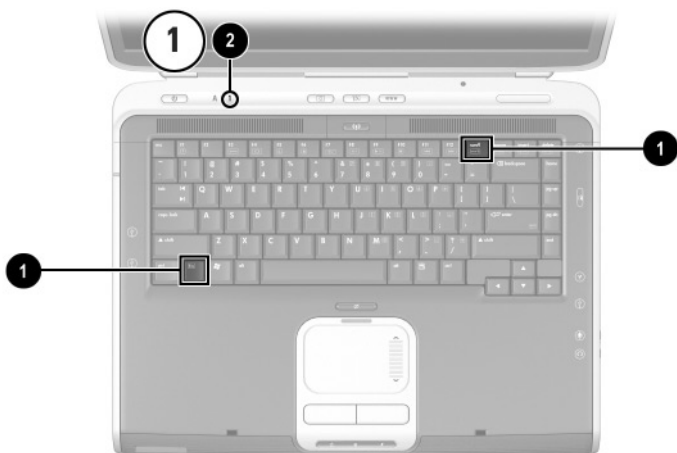

*Identifying the **Fn** and **num lock** keys and the num lock light*



*Identifying the **Fn** and **num lock** keys and the num lock light*

Switching Key Functions on the Keypad

You can temporarily switch the functions of keys on the keypad between the standard function and the keypad function by using the **Fn** key or the **Fn+shift** key combination.

- To make a standard key function as a keypad key (when the keypad is turned off), press and hold the **Fn** key while pressing the keypad key.
- To make a keypad key function as a standard key (while the keypad is turned on):
 - Press and hold the **Fn** key to type in lowercase.
 - Press and hold **Fn+shift** to type in uppercase.

When the **Fn** key is released, the keys return to their original mode.

Turning Num Lock Mode On or Off as You Work

To turn num lock on or off on an external keypad as you work, press the **num lock** key on the external keypad (not on the notebook keypad).

Battery Packs

Running the Notebook on Battery Power

The notebook switches between AC power and battery power according to the availability of an external AC power source, always preferring AC power. If the notebook contains a charged battery pack and is running on external AC power, the notebook will switch to battery power only if the AC adapter is disconnected from the notebook.

Keeping a battery pack in the notebook enables the battery pack to charge whenever the notebook is connected to external power and also protects your work in case of a power outage.

On the other hand, a battery pack in the notebook slowly discharges even when the notebook is powered off. Whether to leave a battery pack in the notebook or in storage depends on how you work.

Inserting or Removing the Battery Pack



CAUTION: When removing a battery pack that is the only power source, initiate Hibernation or turn off the notebook to prevent loss of work.


To insert or remove a battery pack:

- Turn off the notebook or initiate Hibernation by briefly pressing the power button.
 - To insert a battery pack, slide the battery into the battery bay until it is seated ❶.
 - To remove a battery pack, slide and hold the battery release latch ❷ toward the rear of the notebook as you pull the battery pack from the battery bay ❸.
-



CAUTION: Do not restore power until the power/Standby light turns off, indicating that the notebook is in Hibernation.

- Turn on the notebook or resume from Hibernation by briefly pressing the power button.

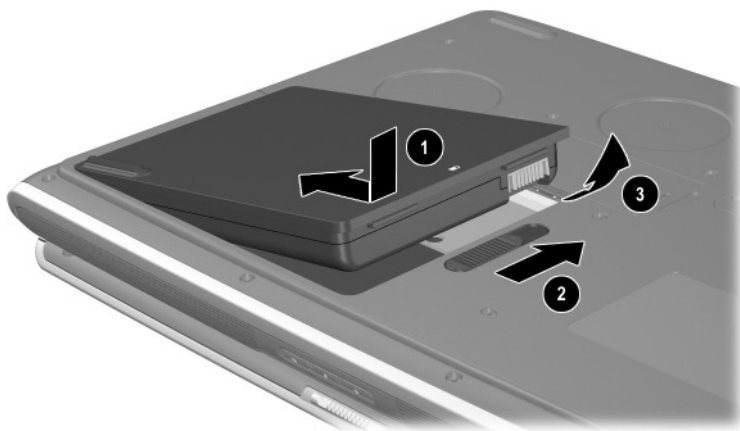

Inserting or removing the battery pack




Inserting or removing the battery pack

Charging a Battery Pack

The battery pack automatically charges when the notebook is connected to external power through an AC adapter. The battery pack charges whether the notebook is powered off or in use, but it charges faster when the notebook is powered off. When the notebook is in use, charging will take longer, depending on system activity.

The battery light on the notebook stays on while the battery pack is charging. The light turns off when the battery is fully charged.

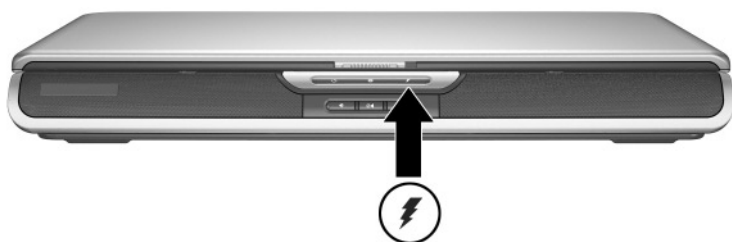

Identifying the battery light



Identifying the battery light

Obtaining Accurate Charge Information

Charging the battery pack prolongs battery life and increases the accuracy of the battery gauge. When charging the battery:

- Allow the battery pack to fully *discharge* before charging it.
- Charge the battery pack *fully*. Even a new battery pack can display charge information inaccurately if it has not been charged fully.
- Fully charging and discharging the battery pack will reduce the need for battery calibration.
- A battery pack in a notebook that has been idle for over one month might need calibrating. See [“Calibrating a Battery Pack”](#) in this chapter for details.

Accessing the Battery Charge Display

To see the amount of charge remaining in the battery pack:

- » Select Start > Control Panel > Performance and Maintenance > Power Options > Power Meter.



If the Power Meter icon is placed on the taskbar, it will change shape according to whether a battery pack or AC power is the primary power source.

Interpreting Battery Charge Displays

Most battery charge displays report battery status in terms of percent of charge remaining and run time remaining.

The run time remaining indicates the approximate running time left if the battery pack continues to provide power at the current level. For example, battery run time will decrease if you start playing a DVD and will increase if you stop playing a DVD.

Placing the Power Meter Icon on the Taskbar

To place the Power Meter icon on the taskbar, access the Power Options window.

- » Select the Advanced tab, and then select the Always show icon on the taskbar check box.



If the Power Meter icon is on the taskbar, it will change shape depending on whether a battery pack or AC power is the primary power source.

Managing Low-Battery Conditions

It is important to respond to a low-battery or critical low-battery condition. This section describes default battery settings and ways to protect your work in a low-battery condition.

Identifying a Low-Battery Condition

When the battery pack is the only power source for the notebook and drops to 5 percent of a full charge, the notebook has reached a low-battery condition. When this condition occurs, the battery light blinks and a text warning message is displayed.

The Power Options utility allows you to redefine a low-battery condition, set audio warnings, and change other power defaults. For details, see the “Power” chapter in the *Software Guide* on the *Documentation Library* CD.

Identifying a Critical Low-Battery Condition

If you do not resolve a low-battery condition, the notebook enters a critical low-battery condition. By default, the notebook defines a critical low-battery condition as 3 percent of a full battery charge remaining.

The battery light continues to blink and:

- If Hibernation is enabled (the default setting) and the notebook is on or in Standby, the system initiates Hibernation and saves system memory to the hard drive. Unsaved work might be lost.
- If Hibernation is disabled and the notebook is on or in Standby, the notebook remains briefly in Standby, then shuts down. The power/Standby light turns off, and the notebook cannot save system memory to the hard drive.

Verifying Hibernation Settings

Hibernation, enabled by default, is an important safeguard in low-battery situations. To verify that Hibernation is enabled, access the Power Meter icon, or:

- » Select Start > Control Panel > Performance and Maintenance > Power Options > Hibernate. Make sure that the Enable Hibernate support check box is selected.

Resolving Low-Battery Conditions



CAUTION: If the notebook has reached a critical low-battery condition and initiated Hibernation, do not restore power until the power/Standby light turns off, indicating that the notebook is in Hibernation.

- If external power is available to the notebook, connect the AC adapter.
- If a charged battery pack is available, shut down the notebook or initiate Hibernation. Then insert a charged battery pack, and turn the notebook back on.
- If no power source is available, save your work. Then initiate Hibernation or shut down the notebook.

If you cannot resume from Hibernation when power is restored to the system, you will be prompted to delete the restoration data and proceed with system boot. Unsaved data will be lost.

Calibrating a Battery Pack

When to Calibrate

Even if a battery pack is heavily used, it should not be necessary to calibrate it more than once a month. It is not necessary to calibrate a new battery pack before first use. However, make sure that the battery pack is fully charged, especially if it is the only power source.

Calibrate the battery pack under the following conditions:

- When the battery status display seems inaccurate.
- When you observe a significant change in normal battery run time.
- When the battery pack has not been used for one month or more.

How to Calibrate

To calibrate a battery pack, you must fully charge, fully discharge, and then fully recharge the battery pack.

Charging the Battery Pack

Fully charge the battery pack when the notebook is in use. To charge the battery pack:

1. Insert the battery pack into the notebook.
2. Connect the notebook to external power through an AC adapter. (The battery light turns on.)

The battery light turns off when the battery pack is fully charged.

Discharging the Battery Pack

Disabling Hibernation

To fully discharge the battery pack, disable Hibernation temporarily.

To disable Hibernation:

- » Select the Power Meter icon on the taskbar or access Power Options > Hibernate, and clear the Enable Hibernate support check box.

Discharging the Battery Pack




CAUTION: If you plan to leave the notebook unattended during discharge, save your work before starting the discharge procedure.

After the battery light turns off, which indicates that the battery pack is fully charged, begin discharging the battery pack.

To fully discharge the battery pack:

1. Select the Power Meter icon on the taskbar, or select Start > Control Panel > Performance and Maintenance > Power Options > Power Schemes.
2. Write down the 3 settings in the Plugged In column and the 3 settings in the Running on Batteries column, so you can reset them after calibration.
3. Select the drop-down lists and set all 6 options in both columns to Never.
4. Select the OK button.
5. Disconnect the notebook from the external power source, but do *not* turn off the notebook.
6. Run the notebook on battery power until the battery pack is fully discharged. The battery light begins to blink when the battery pack has discharged to a low-battery condition. When the battery pack is fully discharged, the power/Standby light turns off and the notebook shuts down.

Recharging the Battery Pack

1. Connect the notebook to external power and keep the notebook connected until the battery pack is fully recharged and the battery light turns off.
 You can use the notebook while the battery pack is recharging, but the battery pack will charge faster if the notebook is turned off.
2. Select the Power Meter icon on the taskbar or select Start > Control Panel > Performance and Maintenance > Power Options > Power Schemes.
3. Reenter the 3 settings you wrote down for the 3 options in the Plugged In column and for the 3 options in the Running on Batteries column.
4. Select the OK button.



CAUTION: To reenable Hibernation after calibrating the battery pack, select Start > Control Panel > Performance and Maintenance > Power Options > Hibernate, and then select the Enable Hibernation check box.

Battery Conservation Procedures and Settings

Using the battery conservation procedures and settings described in the following section extends the run time of the battery pack.

Conserving Power as You Work

To conserve power while you use the notebook:

- Plug in the AC adapter, especially if you are using a CD-ROM or DVD-ROM drive, or any external connections.
- Turn off wireless and local area network (LAN) connections and exit modem applications when you are not using them.
- Set the automatic timeout settings to emphasize saving power.

- Unplug external devices not connected to external power when you are not using them.
- Stop or remove a PC Card or a digital media card that you are not using.
- Decreasing screen brightness by pressing **Fn+F7** saves power. See “[Hotkey Commands](#)” in the “TouchPad and Keyboard” chapter for more about using **Fn+F7**.
- Use optional powered speakers instead of the internal speakers, or use the volume buttons to quickly increase and decrease system volume as you need it.
- Turn off a device connected to the S-Video connector.
- If you leave your work, initiate Standby or Hibernation or shut down the notebook.
- Select a short wait time, 5 minutes or less, for the display timeout. To change display timeout settings, select Start > Control Panel > Performance and Maintenance > Power Options > Power Meter. Select a short wait time from the Turn Off Monitor drop-down list, and then select OK.

For more details about using power options, refer to the “Power” chapter in the *Software Guide* on this CD.

Storing a Battery Pack



CAUTION: To prevent damage to the battery pack, do not expose it to high temperatures for extended periods of time.

If the notebook will be unused and unplugged for more than 2 weeks, remove and store the battery pack.

High temperatures accelerate the self-discharge rate of a stored battery pack, so place it in a location that is cool and dry.

Before using a battery pack that has been stored for one month or more, calibrate it. This insures that the battery information displayed by your notebook is accurate.

Disposing of a Used Battery Pack



WARNING: There is a risk of fire and chemical burn if a battery pack is handled improperly. Do not disassemble, crush, or puncture a battery pack or short the contacts on it. Do not expose a battery pack to temperatures higher than 60°C (140°F), or dispose of it in water or fire.

When a battery pack has reached the end of its useful life, do not dispose of it in general household waste.

- In Europe, dispose of or recycle battery packs by using the public collection system or by returning them to HP, your authorized HP, or their agents.
- In other regions, refer to the *Worldwide Telephone Numbers* booklet included with the notebook to contact a reseller or service provider and request information about battery pack disposal.

For more information about battery pack precautions and disposal and the complete text of governmental agency notices, refer to the *Regulatory and Safety Notices* guide on this CD.

Finding More Power Information

For more information about conserving power, setting power preferences, and using Standby and Hibernation, refer to the “Power” chapter in the *Software Guide* on this CD.

About Drive Terms

Hard drives are for permanent storage of data files and software, such as system files, applications, and drivers. A hard drive is sometimes called a *hard disk drive*.

Optional disk drives (select models) include diskette drives. A diskette drive is sometimes called a *floppy disk drive* or *floppy drive*. Drives are often used to store or transport data.

Optical drives include CD and DVD drives. Optical drives are used to store or transport data and to play music and movies. DVD drives have a higher storage capacity than CD drives.



A DVD+RW/R and CD-RW combo drive can write to both recordable CDs and recordable DVDs.



A DVD/CD-RW combo drive can write to recordable CDs (CD-R and CD-RW media) but cannot write to recordable DVDs (DVD+R, DVD+RW, DVD-R, or DVD-RW media).

Depending on your model, the notebook can read or write to optical drives as described in the following table.

Optical Drive	Read	Write
CD-ROM	Yes	No
DVD-ROM	Yes	No
DVD/CD-RW combo	Yes	Yes, but only CD media
DVD+RW/R and CD-RW combo	Yes	Yes

Optional HP USB Digital Drives (select models) are pocket-sized, SD (Secure Digital) Memory Card drives for storing and transferring files such as digital pictures, music, video, or large data files. An HP USB Digital Drive can be connected to an optional Digital Bay or to a USB port with the HP USB Digital Drive cable either retracted or extended.

A *diskette*, *disk*, or *disc* that can be inserted or removed from a drive is referred to as a *drive medium*. In this guide, a *diskette* is used in a *diskette drive*, a *disk* is used in a high-capacity disk drive, and a *disc* is used in an optical drive, such as a CD-ROM drive or DVD-ROM drive. Drive media include diskettes, CDs, and DVDs.

Caring for Drives and Drive Media

Drives and drive media are fragile notebook components that must be handled with care. The following cautions apply to all drives. Cautions that concern specific procedures are included with the procedures.

Caring for Drives



CAUTION: To prevent damage to the notebook or a drive and loss of work:

- Do not remove the internal hard drive except for repair or replacement.
- Do not try to remove a Digital Drive while it is still in use.
- Electrostatic discharge can damage electronic components. To prevent electrostatic damage to the notebook or a drive, follow these 2 precautions: (1) Before handling a drive, discharge yourself from static electricity by touching a grounded metal object, and (2) Avoid touching the connectors on a drive. For more information about preventing electrostatic damage, refer to the "Electrostatic Discharge" section in the *Regulatory and Safety Notices* guide on the *Documentation Library* CD.
- Excessive force can damage drive connectors. When you insert a drive, use only enough force to seat the drive.
- Handle a drive carefully. Do not drop it.
- Avoid exposing a hard drive or a diskette to devices with magnetic fields. Products with magnetic fields include video and audio tape erasure products, monitors, and speakers. Security devices with magnetic fields include airport walk-through devices and security wands. The airport security devices that check carry-on luggage, usually while it is placed on a conveyor belt, use x-rays instead of magnetism and will not damage a hard drive or a diskette.
- Do not spray a drive with cleaners.
- Avoid exposing a drive to liquids or temperature extremes.
- If you mail a drive, ship it in packaging that protects it from shock, vibration, extreme temperatures, and high humidity. Label the package "FRAGILE."

Caring for Drive Media



CAUTION: To prevent damage to drive media:

- Do not open the metal shutter of a diskette or touch the disk within the diskette case.
 - Do not expose a diskette to a strong magnetic field, such as the security field used by a walk-through security device or a handheld security wand.
 - Clean a CD or DVD only with a disc cleaning kit, available from most electronics retailers.
-

Using Drive Media

Avoiding Standby and Hibernation



CAUTION: Initiating Standby or Hibernation while playing optical drive media might stop the play or diminish the quality of the play.

Turn off all media before initiating Standby or Hibernation. If Standby or Hibernation is accidentally initiated when an optical drive is in use, you might see a warning message: “Putting the computer into Hibernation or Standby might stop the playback. Do you want to continue?” Select No.

Resume from Hibernation or Standby by pressing the power button briefly. Audio and video might resume or you might need to restart the drive media.

For details about Standby and Hibernation, refer to the “Power” chapter in the *Software Guide* on this CD.

Displaying Media Contents

AutoPlay, sometimes called *Autorun*, is a feature of the operating system. AutoPlay displays the contents of your media on the screen when you insert a CD or DVD into an optical drive and close the tray.

AutoPlay is enabled by default, but can be disabled.

Setting AutoPlay Preferences

AutoPlay is enabled or disabled through the operating system:

1. Select Start > My Computer.
2. Right-click the optical drive.
3. Select Properties > AutoPlay, and follow the instructions on the screen.

Canceling AutoPlay on an Audio CD

To prevent an audio CD from opening when AutoPlay is enabled, press the **shift** key as you insert the CD.

Displaying the Contents of a CD or DVD

If AutoPlay is disabled and the contents of a CD or DVD are not displayed when you insert it, you can display the contents manually:

1. Select Start > Run, and then type:
X:
(where X = the drive containing the CD or DVD)
2. Press **enter**.



A drive designation is a letter of the alphabet that the notebook uses to identify a drive. To display the drive designation of every drive in the system, select Start > My Computer.

Adding a Drive to the System

The internal hard drive and optical drive are standard features of the notebook. The type of optical drive varies by notebook model. Hard drive capacity can also be added with a microdrive PC Card or an external hard drive.


Some notebook models include an optional diskette drive or an optional HP USB Digital Drive. The HP USB Digital Drive can be connected to one of the USB connectors or to the optional Digital Bay.

An optional disk drive can also be added to the system by attaching it to one of the USB connectors or to the 1394 connector.


For more on connecting external devices, see Chapter 6, [“External Device Connections.”](#) For details about PC Cards, see Chapter 8, [“Hardware Upgrades.”](#)

Using the IDE Drive Light

The IDE (Integrated Drive Electronics) light turns on when the internal hard drive or an optical drive is being accessed. The light is also referred to as the hard drive/optical drive activity light.

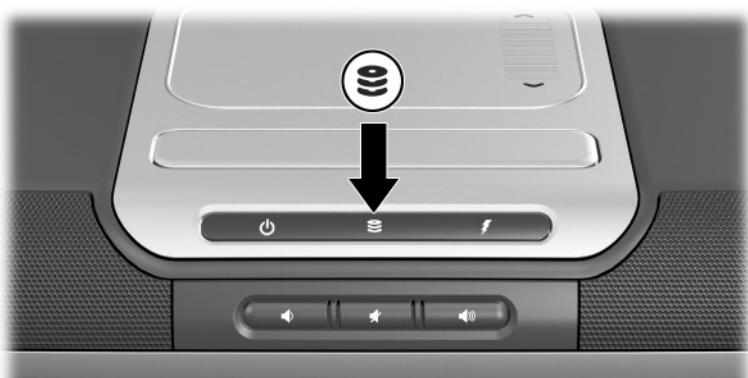

Identifying the IDE drive light

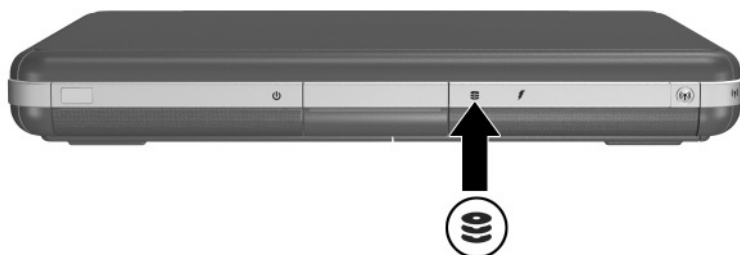

Identifying the IDE drive light


Inserting and Removing Drive Media




CAUTION: To avoid playback distortion or damage to optical media, stop the CD or DVD and exit media software before inserting or removing an optical drive.

Inserting a CD or DVD

1. Turn on the notebook.
2. Press the release button ❶ on the drive bezel to release the media tray, and then pull the tray out until it is fully extended ❷.
3. Position a CD or one-sided DVD over the tray spindle ❸, label side up.
4. Gently press on the disc near the hole until the disc snaps into place. If the media tray is not fully extended, tilt the disc to position it over the tray spindle, and then press it down into position. Handle the disc by the edges, not the flat surfaces.
5. Close the media tray ❹.

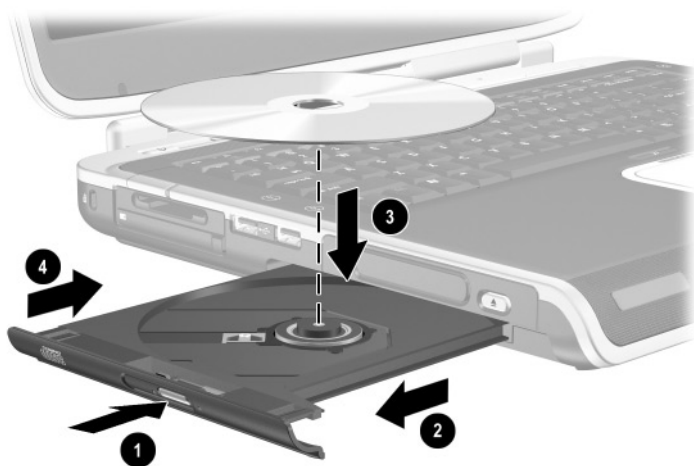


Inserting a CD or DVD into an optical drive

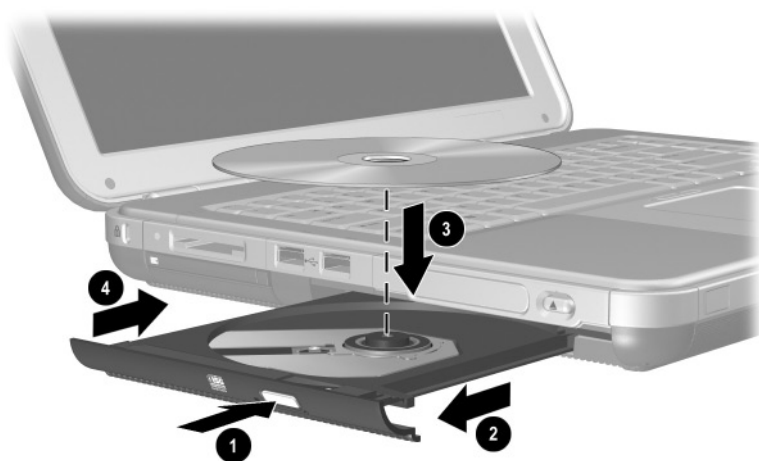


Inserting a CD or DVD into an optical drive

Removing a CD or DVD (With Power)

1. Turn on the notebook.
2. Press the release button **1** on the drive bezel to release the media tray, and then pull the tray out until it is fully extended **2**.
3. Remove the disc from the tray **3** by gently pushing down on the spindle while pulling up on the outer edges of the disc. If the media tray is not fully extended, tilt the disc as you remove it. Handle the disc by the edges, not the flat surfaces.
4. Close the media tray.
5. Place the disc in a protective case.

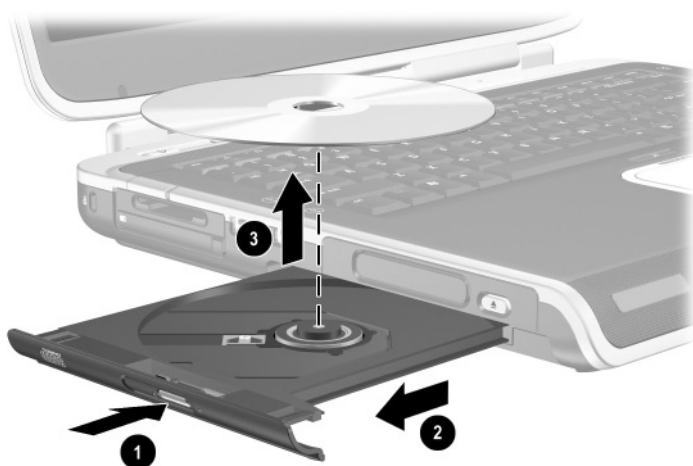

Removing a CD or DVD from an optical drive when power is available

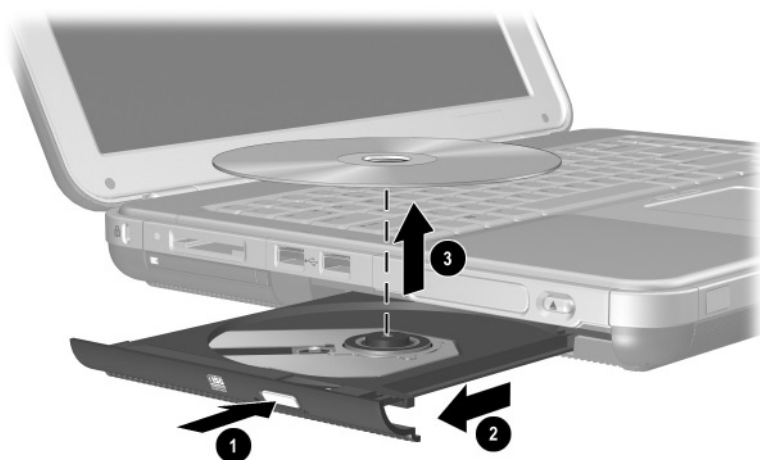


Removing a CD or DVD from an optical drive when power is available


Removing a CD or DVD (Without Power)

If the notebook is turned off or if no power is available, the release button on the drive will not work. To remove a disc from an optical drive without using the release button:

1. Insert the end of a paper clip into the release access ❶ in the front bezel of the drive.
2. Press gently on the paper clip until the media tray is released, then pull the tray out until it is fully extended ❷.
3. Remove the disc from the tray ❸. If the media tray is not fully extended, tilt the disc as you remove it. Handle the disc by the edges, not the flat surfaces.
4. Close the media tray.
5. Place the disc in a protective case.

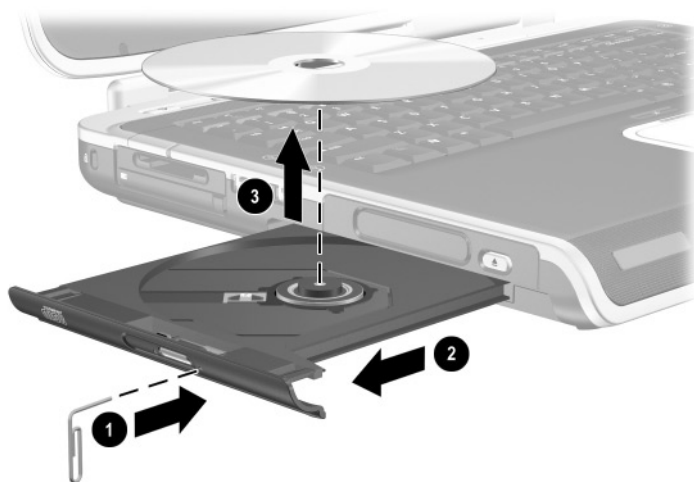

Removing a CD or DVD from an optical drive when power is not available

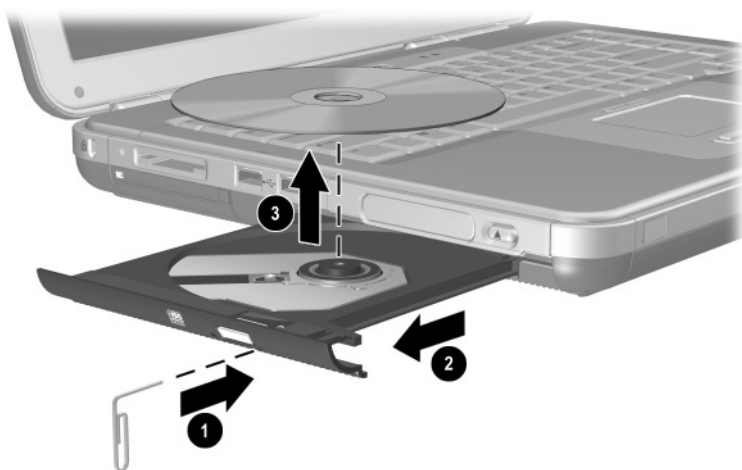

Removing a CD or DVD from an optical drive when power is not available

Inserting a Diskette (Select Models)

To insert a diskette into a diskette drive, gently slide the diskette, label side up, into the drive until it clicks into place.

The media eject button extends when the diskette is correctly inserted.



Identifying the media eject button on a diskette drive



Identifying the media eject button on a diskette drive

Removing a Diskette (Select Models)

To remove a diskette from a diskette drive:

1. Press the media eject button on the drive to eject the diskette.
2. Slide the diskette from the drive.
3. Place the diskette in a protective case.

Installing an Optional HP USB Digital Drive (Select Models)

Optional HP USB Digital Drives are pocket-sized, SD (Secure Digital) Memory Card drives for storing and transferring files such as digital pictures, music, video, or data files. An HP USB Digital Drive can be connected to the optional Digital Bay or to the USB port.


An SD Memory Card must be installed in the HP USB Digital Drive before you can install the Digital Drive in your notebook. Depending on your notebook model, you might or might not have an SD Memory Card. You can purchase SD Memory Cards from computer or electronics retailers.




Installing an Optional SD Memory Card

To install an SD Memory Card into the Digital Drive:

1. Remove the cap of the Digital Drive.

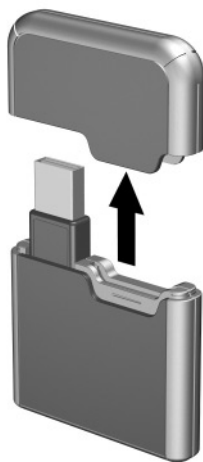

2. Insert an SD Memory Card into the SD slot of the Digital Drive.

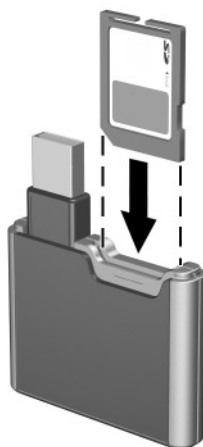


Connecting an Optional Digital Drive to the USB Port


The optional Digital Drive can be connected to the USB port with the USB cable either retracted or extended.

To connect the Digital Drive with the USB cable retracted:

1. Ensure that you have installed an SD Memory Card into the Digital Drive.
2. Insert the USB connector on the Digital Drive into the USB port on your notebook.

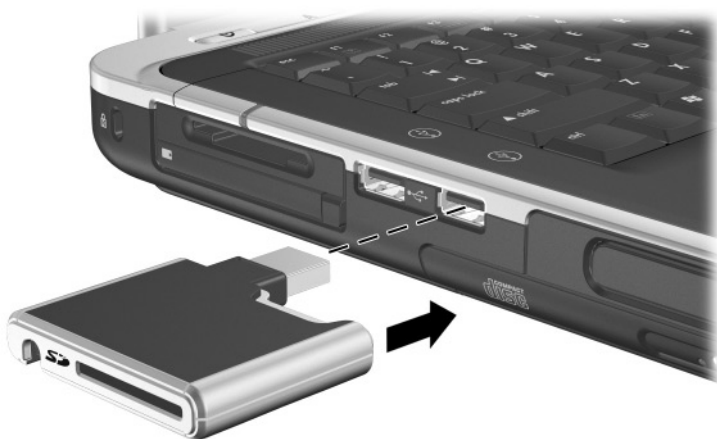


Connecting the Digital Drive to the USB port

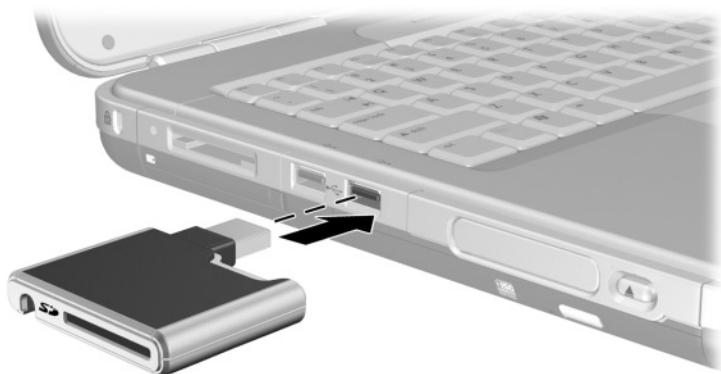

Connecting the Digital Drive to the USB port


To connect the optional Digital Drive with the USB cable extended:

1. Rotate the USB cable until it is fully extended.

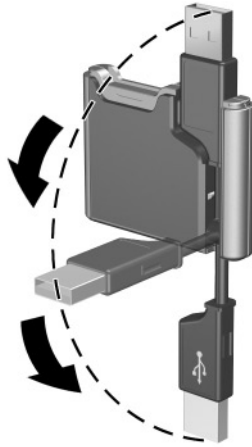


Extending the USB Cable

2. Insert the connector on the USB cable into the USB port on your notebook.

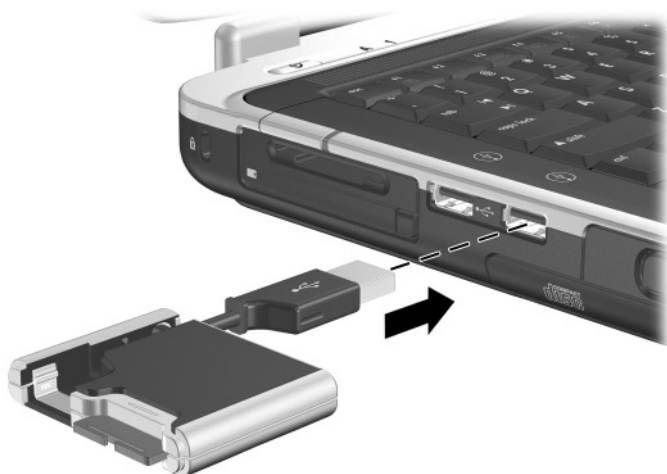

Connecting the extended USB cable to the USB Port

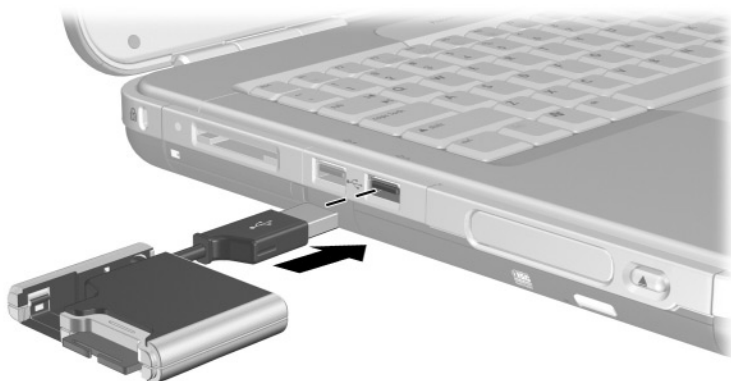

Connecting the extended USB cable to the USB Port


Inserting an Optional Digital Drive into an Optional Digital Bay

To insert an optional Digital Drive into the optional Digital Bay:

1. Ensure that you have installed an SD Memory Card into the Digital Drive.
2. Gently insert the Digital Drive, label side up, into the Digital Bay until the drive clicks into place.



Inserting the Digital Drive into the Digital Bay

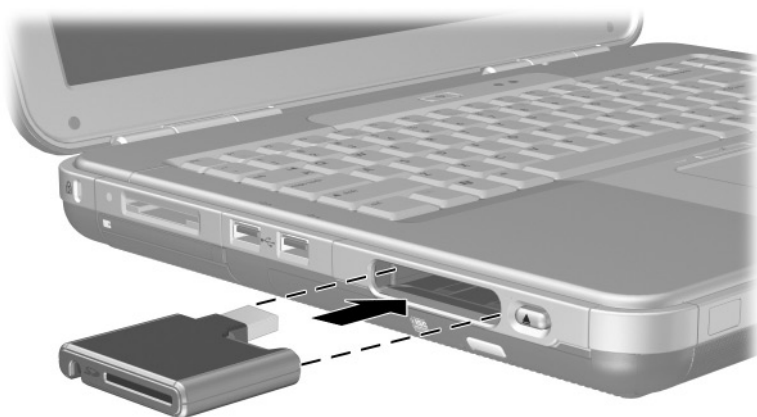


Inserting the Digital Drive into the Digital Bay


Removing an Optional Digital Drive from an Optional Digital Bay

To remove the optional Digital Drive from the optional Digital Bay:

1. Press the Digital Drive release button **1** to eject the Digital Drive.
2. Remove the Digital Drive from the bay **2**.

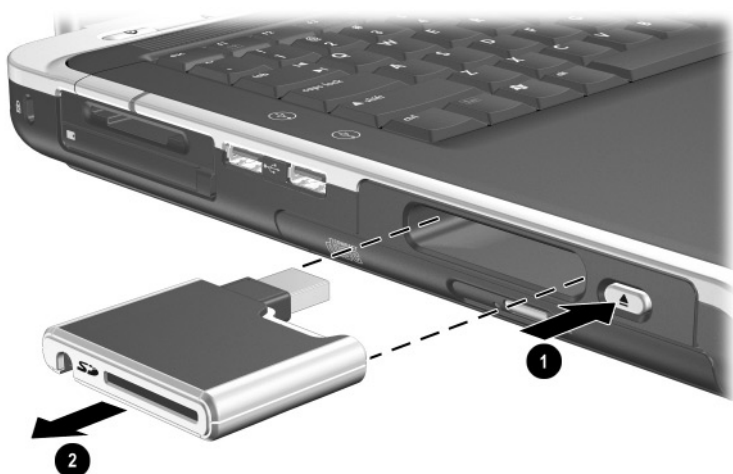

Removing the Digital Drive from the Digital Bay

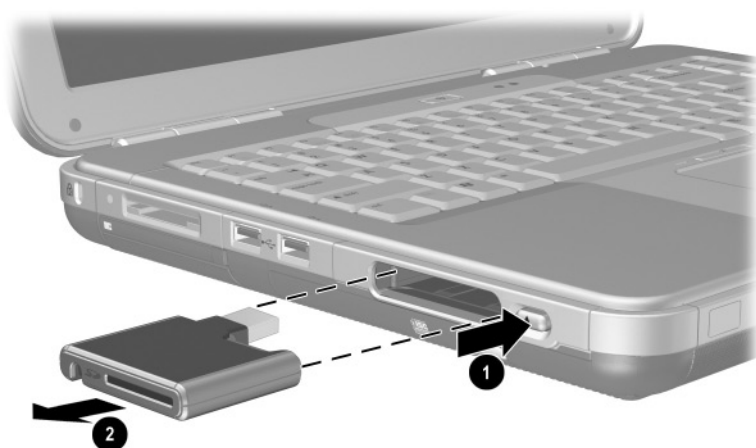

Removing the Digital Drive from the Digital Bay

Finding Optional Drive Software Information

Software you need to play CDs and DVDs is available on the notebook. For more information, refer to the “Multimedia” chapter in the *Software Guide* on this CD.

Audio and Video

Adjusting Volume

Volume can be adjusted by using the volume buttons on the notebook or by accessing the volume control software. Volume adjustment is also available within some applications.

Using the Volume Buttons


To adjust volume using the volume buttons:

- To decrease volume, press the left volume button ❶.
- To increase volume, press the right volume button ❶.
- To mute or restore volume, press the middle volume button ❷.



Identifying the volume buttons

- To decrease volume, press the left volume button ❶.
- To increase volume, press the middle volume button ❷.
- To mute or restore volume, press the right volume button ❸.

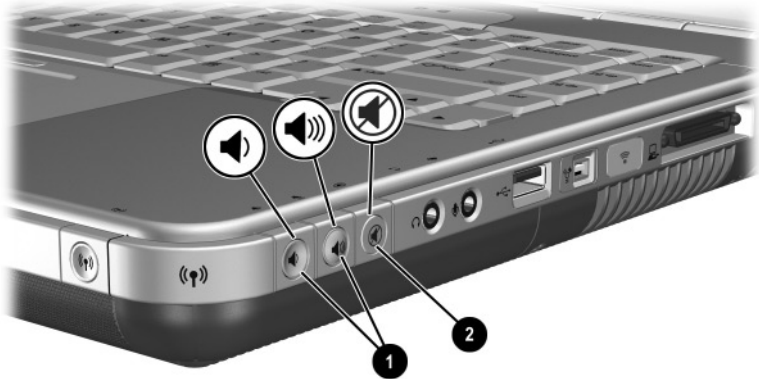

Identifying the volume buttons

Using the Volume Control Icon

To place the Volume Control icon on the taskbar, select **Start > Control Panel > Sounds, Speech, and Audio Devices > Volume**. Select the **Place Volume icon** in the taskbar check box.

To adjust volume, select the icon. To increase or decrease volume, drag the slide bar up or down. To mute or restore volume, select or clear the **Mute** check box.




If you cannot see an icon you have placed on the taskbar, it might be hidden. Select the arrow or thick vertical bar on the taskbar and expand to view icons.

Using the Internal Speakers

The internal speakers play stereo sound from applications, the operating system, games, drive media, the Internet, and other sources.



If an external device, such as a headset, is connected to the audio-out jack, sometimes called the *line-out* jack, the internal speakers are disabled.

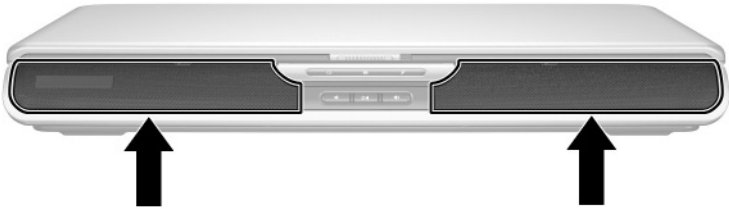

Identifying the internal speakers




Identifying the internal speakers

Connecting an Audio Device


Identifying Audio Jacks

The notebook has 2 audio jacks:

- The audio-out jack ❶, sometimes called the *line-out* jack, connects a headset, headphones, or external stereo speakers. The audio-out jack is also used to connect the audio functions of an audio/video device such as a television or VCR.
- The audio-in microphone jack ❷ connects a monoaural or stereo *external* microphone.

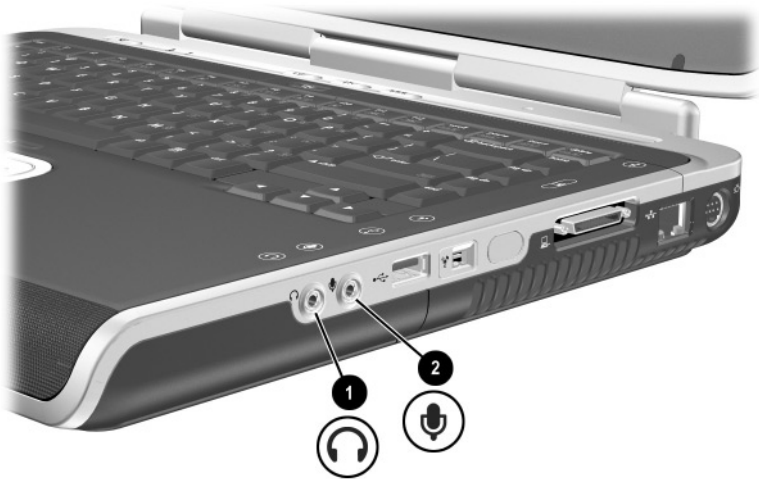

Identifying audio jacks

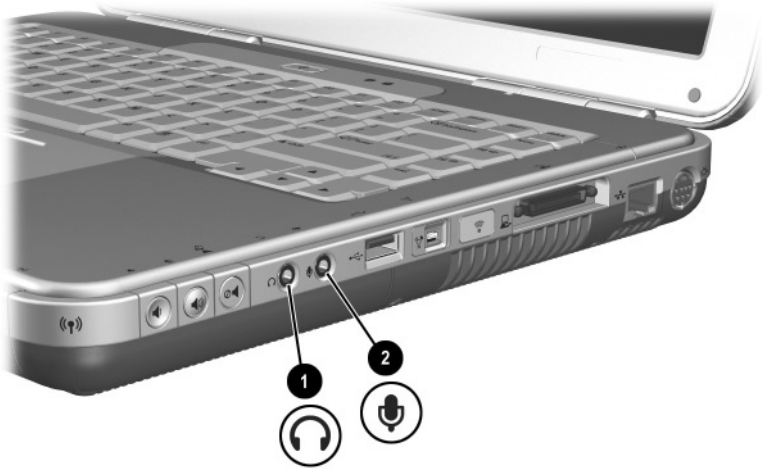

Identifying audio jacks

Using the Microphone Jack

Your notebook is equipped with a stereo microphone jack. Using sound recording application software and an external, stereo microphone allows for stereo (dual channel) recordings and stereo playbacks. Using sound recording application software and an external, monoaural microphone allows for only monoaural (single channel) recordings and stereo playbacks. As a result, the sound will be the same on both left and right channels.

When connecting a microphone to the microphone jack, use a microphone with a 3.5-mm plug.

Using the Audio-Out Jack



WARNING: To reduce the risk of personal injury, adjust the volume before putting on headphones or a headset.



CAUTION: To prevent possible damage to an external device, do not plug a monaural plug into the audio-out jack.

When connecting a device to the audio-out jack:

- Use only a 3.5-mm stereo plug.
 - For best sound quality, use 24-ohm to 32-ohm headphones.
-



When an external audio device is connected to the audio-out jack, the internal speakers are disabled.

Connecting an S-Video Device

Connecting the Audio

The S-Video-out jack supports video signals only.

If you are setting up a configuration that combines audio and video functions, such as playing a DVD movie on your notebook and displaying it on your television screen, you will need a standard 3.5-mm audio cable available from most computer or electronics retailers.

Plug the stereo end of the audio cable into the notebook audio-out jack. Plug the other end of the cable into the audio *input* jack on the external device.


Connecting the Video

To transmit video signals through the S-Video-out jack, you will need a standard S-Video cable available from most computer or electronics retailers.

Plug either end of the S-Video cable into the notebook S-Video-out jack. Plug the other end of the cable into the S-Video *input* (not the video output) jack on the external device.



Identifying the S-Video-out jack

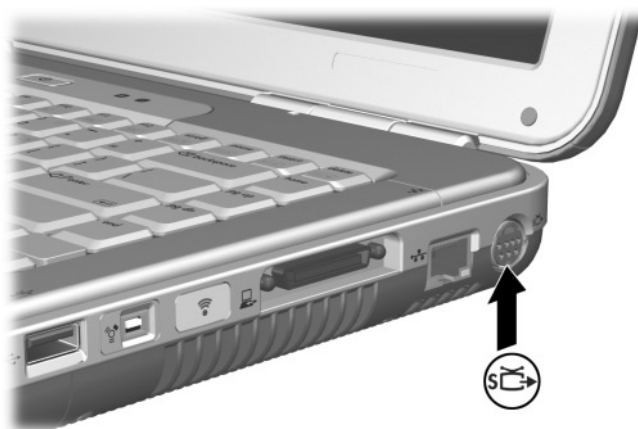

Identifying the S-Video-out jack

Turning a Video Device On and Off

When an S-Video device is turned on, an image is displayed. When the device is off, an image is not displayed.

To turn on a video device, use one of the following methods:

- Start or restart the notebook.
- Access the ATI Displays tab:
 1. Select Start > Control Panel > Appearance and Themes > Display > Settings.
 2. Select the Advanced button.
 3. Select the ATI Displays tab and select the TV Power button.



To conserve power, turn off the device before disconnecting the device from the system.

Changing the Color Television Format

Color television formats are modes by which television video signals are sent and received. To send signals between the notebook and a television, both the notebook and the television must be using the same color television format.

The NTSC format is common in the United States, Canada, Japan, and South Korea. The PAL format is common in Europe, China, Russia, and Africa, and the PAL-M format is common in Brazil. Other South American and Central American countries might use NTSC, PAL, or PAL-M.

Region-specific formats are set at the factory for most notebooks, but the region setting can be changed on any notebook.

To change the color television format:

1. Select Start > Control Panel > Appearance and Themes > Display > Settings. Select the Advanced button and then the ATI Displays tab.
2. Select the TV button, and then select the Format tab.
3. Select a television format either by name or by Country/Region:
 - a. To select a format by name, select Format, select a format name in the list, and select the OK button.
 - b. To select the default format for a region or country, select Country/Region, select a location from the list, and select the OK button.
4. At the prompt, restart the notebook.

External Device Connections

Connecting a Standard Device

The jacks, connectors, and ports described in this guide support standard external devices.

- For information about which jack, connector, or port to use, refer to the documentation included with the device.
- For information about installing or loading any software, such as drivers required by the device, refer to the device documentation, the operating system Help files, or the device manufacturer's Web site.

To connect a standard external device to the notebook:

1. If you are connecting a powered device, be sure that the device is turned off.
2. Connect the device to the correct jack or connector on the notebook.
3. If you are connecting a powered device, plug the device power cord into a grounded electrical outlet.
4. Turn on the device.



If a properly connected external monitor or other display device does not display an image, try pressing the **Fn+F4** hotkey to switch the image to the new device.

To disconnect a standard external device from the notebook, turn off the device (if it is powered), and then disconnect the device from the notebook.

Connecting a USB Device

USB (Universal Serial Bus) is a hardware interface that can be used to connect external devices such as a USB keyboard, mouse, drive, printer, scanner, or hub to the notebook. A hub is a connecting device that can be either powered or unpowered.

Optional USB hubs can be connected to a USB connector on the notebook or on an optional HP Notebook Expansion Base, or to other USB devices. Hubs can support several USB devices.


- Powered hubs must be connected to external power.
- Unpowered hubs must be connected either to a USB connector on the notebook or to a port on a powered hub.

The USB connectors support USB 2.0 and earlier devices.

Some USB devices might require additional support software, which is usually included with the device. For more information and software installation instructions, refer to the documentation included with the device.



Identifying the two USB connectors on the left side and the one USB connector on the right side

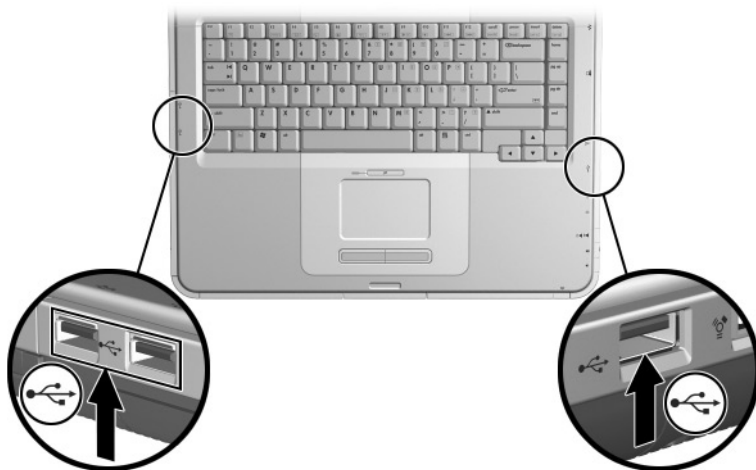

Identifying the 2 USB connectors on the left side and one USB connector on the right side

Using a USB Device

USB devices function in the system the same way as comparable non-USB devices do, with one exception: by default, USB devices do not function unless an operating system that supports USB is loaded. Windows XP Home and Windows XP Professional do support USB.

To use a USB keyboard or hub that is connected to a USB connector on the notebook during startup (before Windows loads) or in a non-Windows application or utility, enable USB legacy support.

Linking to an Infrared Device (Select Models)

Some notebook models are IrDA-compliant and can communicate with another infrared-equipped device that is also IrDA-compliant. The IrDA connection speed standard is 4 megabits per second (Mbps).


The infrared port supports low-speed connections up to 115 kilobits per second (Kbps) as well as high-speed connections up to 4 Mbps.

Infrared performance might vary according to:


- Performance of the infrared peripheral
- Distance and angle between infrared devices
- Software applications being used
- Interference or obstruction between devices



Infrared signals are sent through an invisible beam of infrared light and must have an unobstructed line of sight.

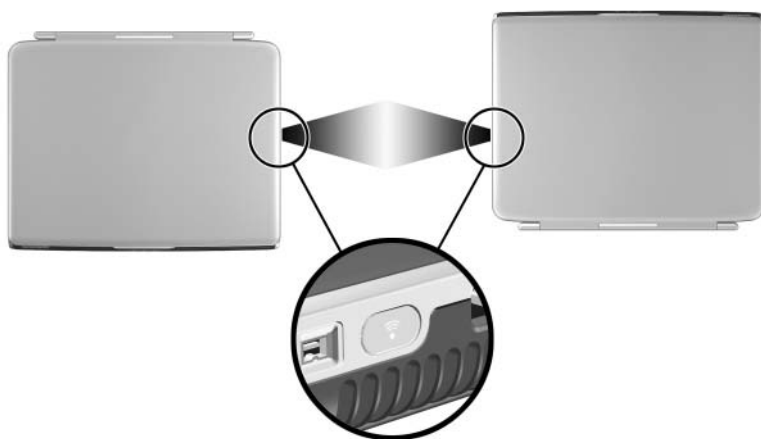

Linking to an infrared device

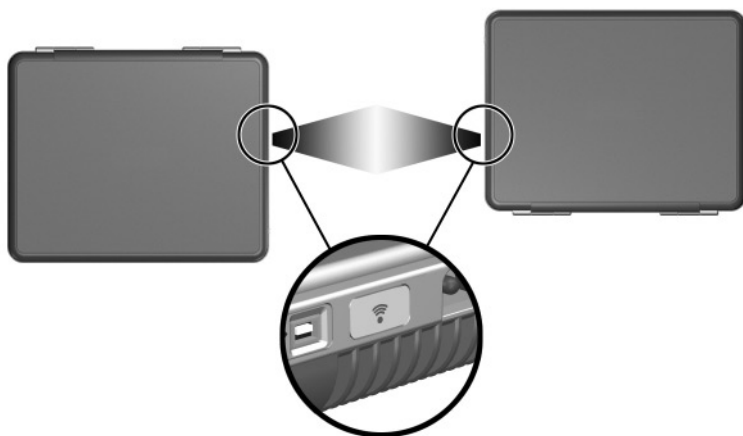


Linking to an infrared device

Setting Up an Infrared Transmission

For information about using infrared software, refer to the operating system Help files.

To set up infrared devices for optimal transmission:

- Prepare the infrared ports on both devices for transmission.

 The notebook infrared port is fully enabled when the notebook is turned on.

- Position the devices so that their infrared ports face each other at a distance of no more than one meter (3.3 feet).
- Position the ports so that they face each other directly. The maximum capture angle is 30 degrees, so the ports must be aligned no more than 15 degrees off center.

- Shield the ports from direct sunlight, flashing incandescent light, and fluorescent light.
- Be sure that signals from a remote control or other wireless device (such as a cell phone, headphones, or audio device) do not aim at either port.
- During the transmission, do not move either device and do not allow objects or movement to disrupt the beam.

Avoiding Standby While Using Infrared

If the notebook is in Standby, an infrared transmission cannot be initiated.

If Standby initiates *during* an infrared transmission, the transmission stops. To resume from Standby, briefly press the power button. When the notebook resumes from Standby, the transmission might resume. If the transmission does not resume, restart the notebook.


Connecting an Optional Cable Lock




The purpose of security solutions is to act as a deterrent. These solutions do not prevent the product from being mishandled or stolen.

To install a security cable lock:

1. Loop the security cable ❶ around a secured object.
2. Insert the key ❷ into the cable lock ❸.
3. Insert the cable lock (with the key inserted) into the security cable slot ❹ on the notebook.
4. Turn the key counterclockwise and remove the key.

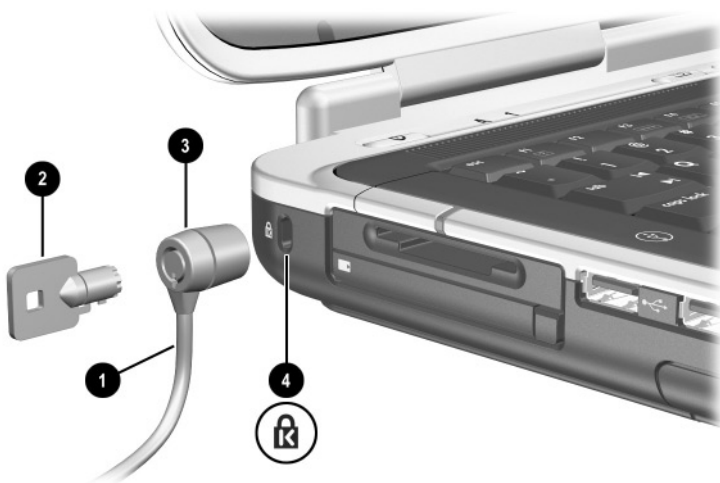

Connecting a security lock

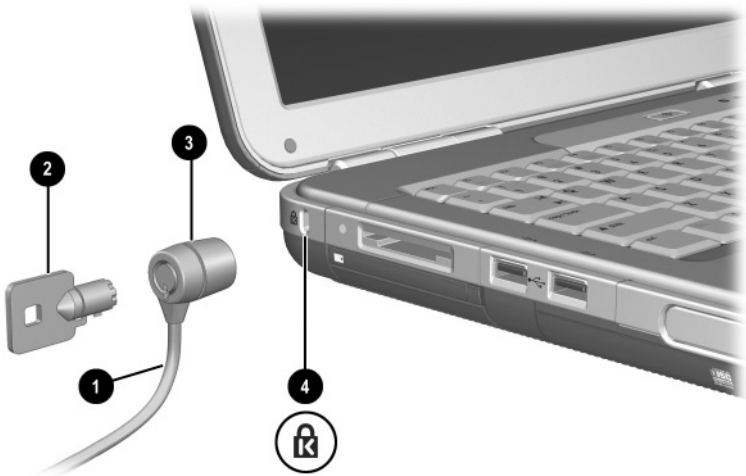

Connecting a security lock

For more information about other security features of your notebook, refer to the “Security” chapter in the *Software Guide* on this CD.

Modem and Network Connections

Using the Modem (Select Models)

Some notebook models include an RJ-11 telephone jack, modem cable, and a preinstalled V.92 modem. You can connect your modem to a telephone line and communicate throughout the world. You can explore the Internet, send and receive email messages, and use your notebook to send and receive faxes. Your notebook contains several software programs that work with your modem:

- Internet Explorer, for browsing the World Wide Web
- Outlook Express, for sending and receiving email messages
- Windows Fax Console, for sending and receiving faxes

For best performance, you can connect to any Internet service provider (ISP) or modem network that has V.90 or V.92 interoperable modems. Check with your ISP for a list of telephone numbers that support V.90 or V.92. (V.92 enables modem on-hold technology that allows an Internet session to be interrupted to answer a phone call, then resumes the Internet session after the call is completed.)



WARNING: To reduce the risk of electric shock, fire, or damage to the equipment, do not plug a telephone cable into the RJ-45 network jack.



WARNING: Connecting the notebook to a digital line can permanently damage the modem. Immediately disconnect your modem cable if it is accidentally connected to a digital line.



CAUTION: Your built-in modem might not work with multiple phone lines or a private branch exchange (PBX), cannot be connected to a coin-operated telephone, and does not work with party lines. Some of these connections might result in excess electrical voltage and could cause a malfunction in the internal modem. Check your telephone line type prior to connecting your phone line.



CAUTION: Jacks for digital PBX systems might resemble RJ-11 telephone jacks, but they are not compatible with the modem.


A modem must be connected to an analog telephone line.

The maximum speed for faxing is 14.4 Kbps, even though the modem is capable of downloading at higher speeds.


For more information on connecting and configuring your modem, refer to the *Modem and Networking* guide on this CD.

Connecting the Modem to an RJ-11 Jack

Refer to one of the following illustrations to connect an RJ-11 modem cable.

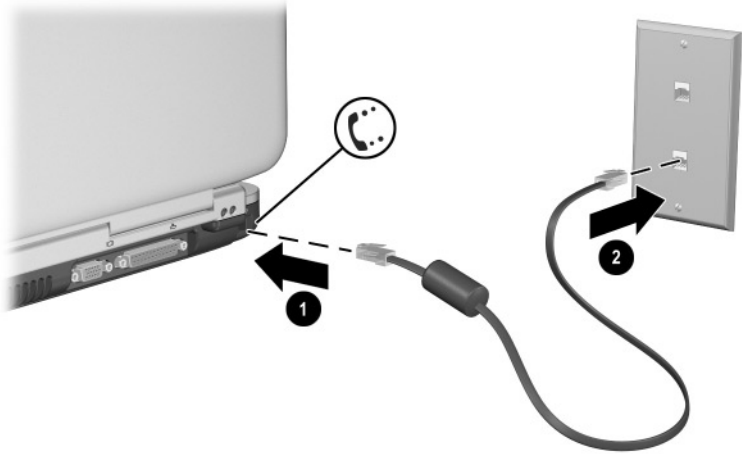

Connecting the RJ-11 modem cable

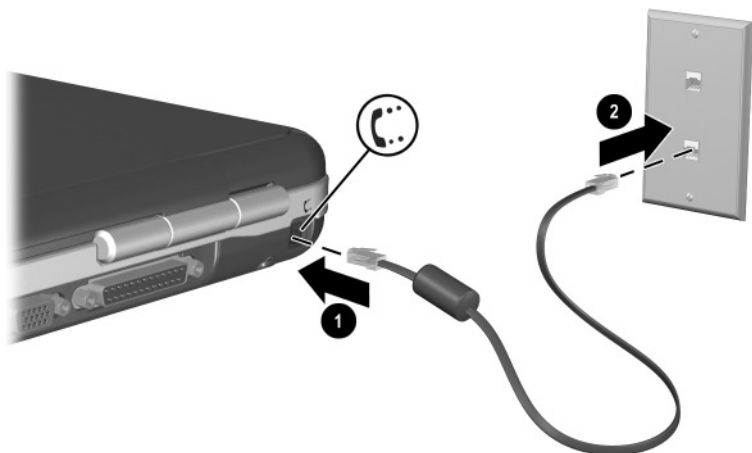


Connecting the RJ-11 modem cable

Connecting the Modem with an Adapter


Telephone jacks vary by country. To use the modem and the RJ-11 cable outside the country in which you purchased the notebook, you must obtain a country-specific modem adapter. For more details about using your notebook internationally, refer to the *Modem and Networking* guide on this CD.

To connect the modem to an analog telephone line that does not have an RJ-11 telephone jack:

1. Plug the modem cable into the RJ-11 jack on the notebook ❶.
2. Plug the modem cable into the country-specific modem adapter ❷.
3. Plug the country-specific modem adapter into the telephone jack ❸.

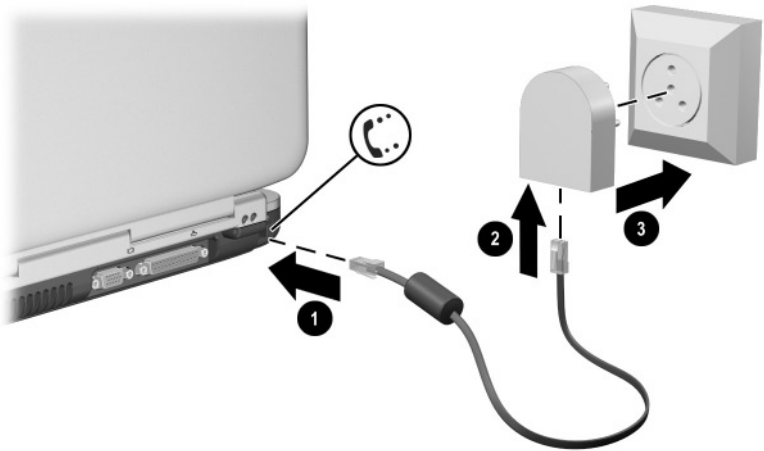

Connecting a modem cable using a modem adapter

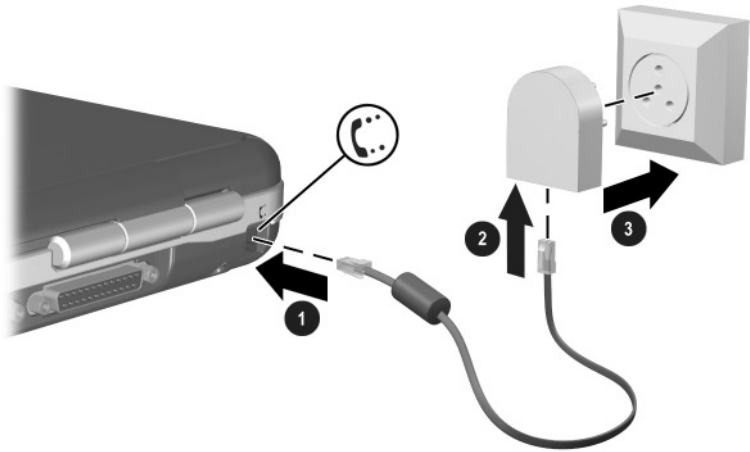

Connecting a modem cable using a modem adapter

Special Restrictions in Certain Countries

- Many countries impose a blackout period after a modem repeatedly fails to connect to a service provider. The number of failed attempts and the period you must wait before trying again differ from country to country. Check with your telephone company.
- When you use a modem, an external surge protector can prevent notebook damage by lightning or other electrical surges. Connect any approved surge protector to the modem cable whenever you are using the modem.

Changing Your Modem Settings

The modem is already set up to be compatible with telephone systems and modems in most areas. However, in some situations, you might have to change modem settings to match local conditions. If you have questions about local requirements, contact your telephone company.

To change your modem settings:

- **Control Panel.** Open Phone and Modem Options in Control Panel to change modem settings by selecting Start > Control Panel > Network and Internet Connections. Select Phone and Modem Options from the left hand panel. On the Modems tab, select Properties to set connection speeds, or on the Dialing Rules tab, select Edit to set dialing options.
- **Communications software.** Many communications applications provide options for controlling modem settings. See the Help for your software.
- **AT commands.** You can control some conditions of the modem operation using modem AT commands. AT commands are special strings of characters sent to the modem to set up specific conditions. Those command strings normally start with "AT."

To open Phone and Modem Options in Control Panel select Start > Control Panel > Network and Internet Connections. Select Phone and Modem Options from the left hand panel. On the Modems tab, select Properties. You can type AT commands on the Advanced tab in the space for extra settings.

Connecting to a Local Area Network (LAN)

Your notebook has an RJ-45 network jack and preinstalled 10BASE-T/100BASE-TX Ethernet circuitry. The notebook supports network speeds up to 10 Mbps when connected to a 10BASE-T network and 100 Mbps when connected to a 100BASE-TX network. A network cable is not included with your notebook but is available from most electronics retailers.


You can connect to local area networks (LANs) that give you access to shared network resources, such as printers and file servers on your corporate network, and possibly to the Internet.

To connect to a LAN:


1. Check that the existing LAN supports Ethernet 10BASE-T/100BASE-TX connections.
2. Plug the purchased network cable into the notebook RJ-45 jack ❶.
3. Plug the other end into the LAN network jack ❷.
4. Windows automatically detects and sets up a LAN connection. To edit settings, open Network Connections in Control Panel.

Two lights on the RJ-45 jack indicate the connection status ❸:

- The yellow light indicates network activity.
- The green light indicates that a link is present.

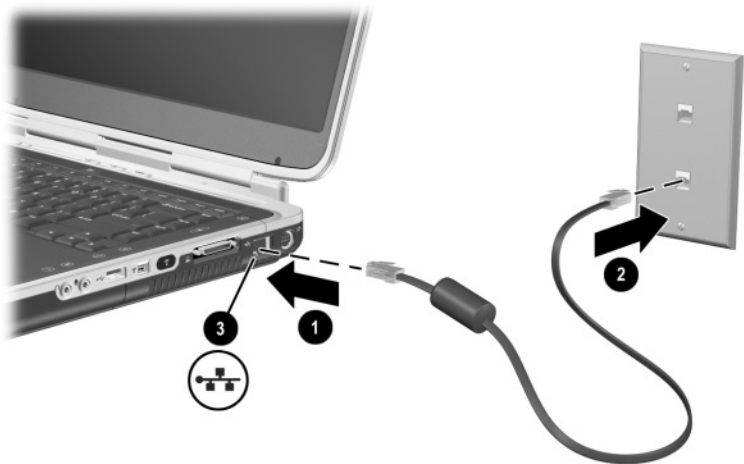

Connecting an RJ-45 network cable

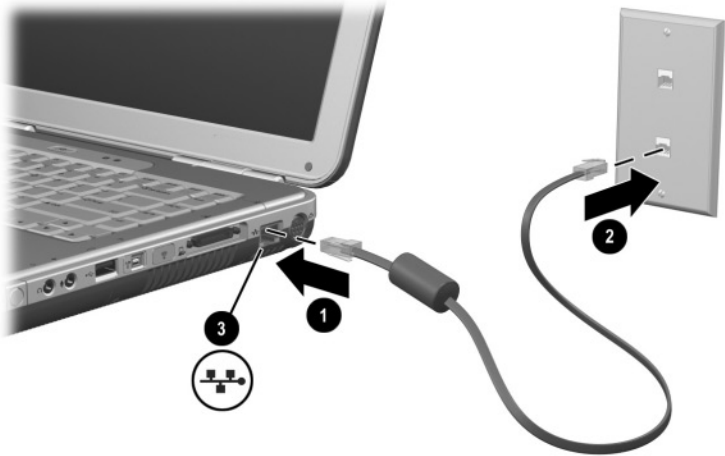

Connecting an RJ-45 network cable

See Windows Help for information about setting up and using LAN connections. Select Start > Help and Support. Contact your network administrator for network information.

Turning a Network Connection Off and On

To conserve power, turn off a network connection you are not using.

- To turn off a network connection, log off the network, and then disconnect the network cable.
- To turn on a network connection, connect the network cable, and then log on to the network.


Making Wireless Network Connections (Select Models)

Some notebook models are equipped with a wireless network device that can connect by radio signals to an 802.11a, 802.11b, or 802.11g wireless local area network (WLAN) and then access computers and other resources on the network (not all available/accessible in all countries).

A wireless network provides all the functions of a typical “wired” network, but also provides for “roaming.” To roam, the notebook must be connected to the network by radio rather than through cables. This connection allows you to move from place to place within the network—from your office to a conference room, for example—and remain on the network the entire time.



Identifying the wireless antenna

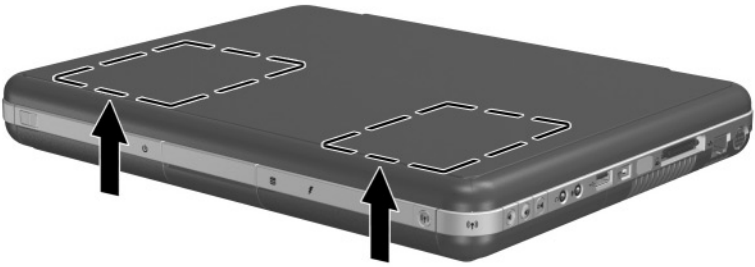

Identifying the wireless antenna



WARNING: Exposure to Radio Frequency Radiation

The radiated output power of this device is below the FCC radio frequency exposure limits. Nevertheless, the device should be used in such a manner that the potential for human contact during normal operation is minimized. To avoid the possibility of exceeding the FCC radio frequency exposure limits, human proximity to the antennae should not be less than 20 cm (8 inches) during normal operation, including when the notebook display is closed.

Turning Wireless Communication On and Off

Wireless networks and cellular modems are examples of devices that use wireless communication. The use of some devices might be restricted in certain situations or environments, such as when traveling in an airplane. If in doubt, be sure to ask for authorization before turning on your notebook wireless networking.

Certain countries, such as Italy and Singapore, might require you to purchase a license before using the wireless function.

Press the Wireless On/Off button to enable wireless 802.11a, 802.11b, or 802.11g functionality. This button also enables the optional Bluetooth® wireless functionality. However, pressing the Wireless On/Off button does not create a wireless connection. To establish a wireless connection, additional hardware and software might be required.

The wireless indicator light on the Wireless On/Off button or on the front-right corner turns on when any wireless functionality is turned on. The location of the light varies by model.

Putting the notebook in Standby or Hibernation, or shutting it down, also turns off the wireless function.



Pressing the Wireless On/Off button



Pressing the Wireless On/Off button

Connecting to a Wireless Network

You can connect to an access point that gives you access to a local area network, or you can connect directly to other computers in an “ad hoc” network.

Before you can connect your notebook to an existing 802.11a, 802.11b, or 802.11g wireless network, you have to configure the notebook. For details on how to configure your notebook for wireless networking, open the Windows Help and Support Center and enter “wireless” as a search topic. This provides you with overviews, tutorials, articles, and step-by-step information on setting up your wireless device.

To check the status of your wireless connection:

- » Select Start > Control Panel > Network and Internet Connections, and then select the connection.

Checking the Wireless Connection Status

If you are within range of your wireless network, your notebook automatically connects.

To check the status of your wireless connection:

- » Open Network and Internet Connections in Control Panel, and then select the connection.

Making Bluetooth Wireless Connections (Select Models)

If your notebook includes Bluetooth wireless capabilities, you can use it to make short-range radio connections to a wireless personal area network (PAN) and access other Bluetooth-compatible devices, such as other notebooks, cell phones, and printers.

For details on how to use your notebook for Bluetooth wireless networking, refer to the *Bluetooth* CD included with your notebook. This CD will provide you with the overviews and step-by-step information on setting up and using your Bluetooth wireless device.

Hardware Upgrades

Obtaining Upgrades

To order notebook hardware or to learn more about upgrades and accessories, visit the HP Web site at <http://www.hp.com/support>.

You can contact an authorized dealer, reseller, or HP service provider by referring to the *Worldwide Telephone Numbers* booklet (English only) included with the notebook.

Compatible hardware upgrade information is also available online by accessing the Help and Support Center on your notebook. Press **Fn+F1** to open the Help and Support Center window.



WARNING: The FCC does not allow unauthorized Mini PCI devices to be used in this notebook. Installing a PCI device can prevent your notebook from operating properly and might result in a warning message. To resume proper notebook operation, remove the unauthorized device. Contact your HP Customer Care Center if a warning message about your Mini PCI device displays in error.

Using PC Cards

An optional PC Card is a credit card–sized accessory designed to conform to the standard specifications of the Personal Computer Memory Card International Association (PCMCIA). The notebook supports both 32-bit (CardBus) and 16-bit PC Cards, which will vary by notebook model.

PC Cards can be used to add modem, sound, memory, storage, and digital camera functions to the notebook. PC Smart Card Reader and biometric identification PC Cards can add security.

Selecting a PC Card

The type of PC card (Type I or Type II) to use in your notebook varies by model. Zoomed video cards are not supported.

Configuring a PC Card



CAUTION: If you install all of the software or any of the enablers provided by a PC Card manufacturer, you might not be able to use other PC Cards. If you are instructed by the documentation included with your PC Card to install device drivers:

- Do not install other software, such as card services, socket services, or enablers, that might also be supplied by the PC Card manufacturer.
 - Install only the device drivers for your operating system.
-

Inserting a PC Card



CAUTION: To prevent damage to the PC Card connectors, use minimal force when inserting a PC Card into a PC Card slot.

1. Hold the PC Card label-side up with the connectors facing the notebook.
2. Gently slide the card into the slot until it is seated.



Inserting a PC Card



Inserting a PC Card

Stopping and Removing a PC Card



CAUTION: To prevent loss of work or an unresponsive system, stop the PC Card before removing it.




Stopping a PC Card, even if it is not in use, conserves power.

1. To stop a PC Card, you might need to select the Safely Remove Hardware icon on the taskbar, and then select the PC Card you want to stop. (To display the Safely Remove Hardware icon, select the Show Hidden Icons icon on the taskbar.)
2. To release the PC Card, press the PC Card eject button ❶.
3. Gently slide the card out ❷.



Removing a PC Card

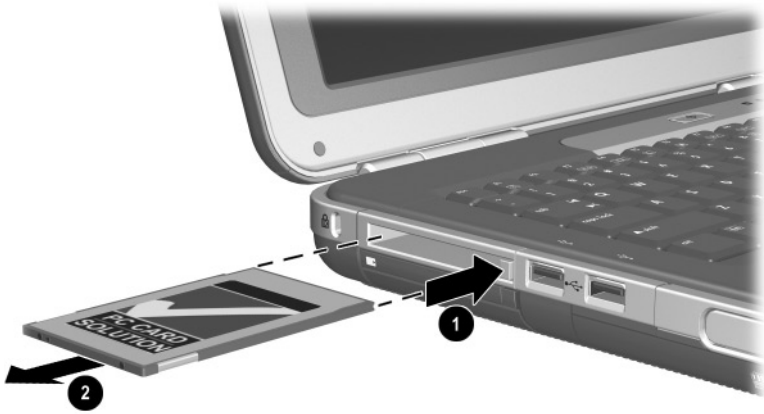

Removing a PC Card

Using Digital Media Cards (Select Models)

Optional digital media cards are removable storage devices that provide a convenient method of storing data and sharing it with other devices such as PDAs, cameras, and other memory card-equipped PCs.

The 5-in-1 Digital Media slot supports the following digital media formats:

- Secure Digital (SD)
- MultiMediaCard
- Memory Stick
- Memory Stick Pro
- SmartMedia


Inserting an Optional Digital Media Card




CAUTION: To prevent damage to the digital media card connectors, use minimal pressure when inserting a digital media card into a Digital Media slot.

To insert a digital media card:

1. Hold the digital media card label-side up (finger-side up for SD cards) with the connectors facing the notebook.
2. Slide the media card into the Digital Media slot until the card is seated.

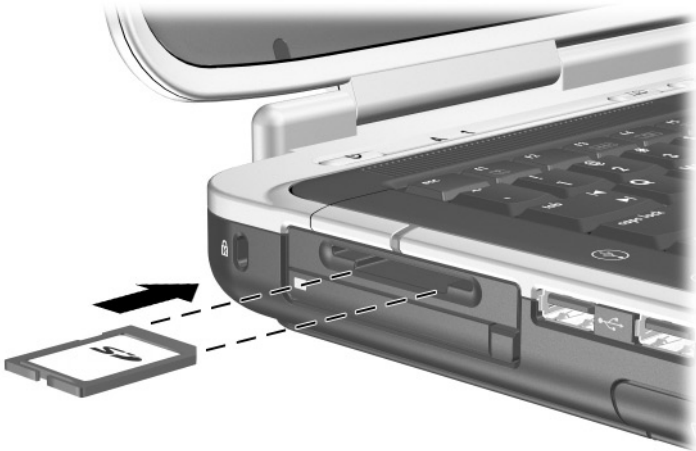

Inserting a digital media card

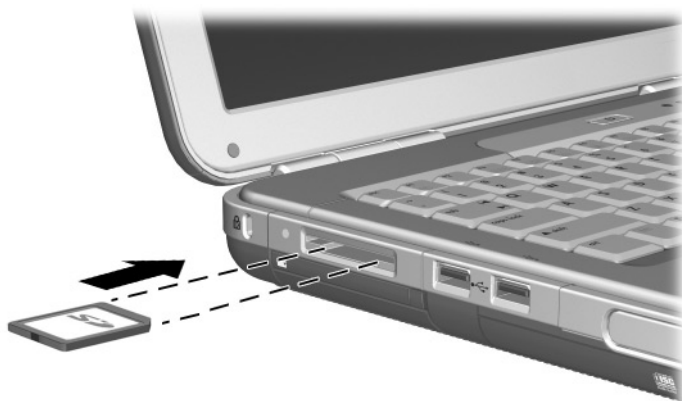

Inserting a digital media card

Removing an Optional Digital Media Card




CAUTION: To prevent loss of work or system lockup, stop the digital media card before removing it.

To remove an optional digital media card:

1. Stop the card by closing all files and applications that are using it. (To stop a data transfer, select the cancel button in the operating system Copying window.)
2. Push the media card in fully, and then release. The media card will eject ❶.
3. Slide the media card out of the slot ❷.



Removing a digital media card

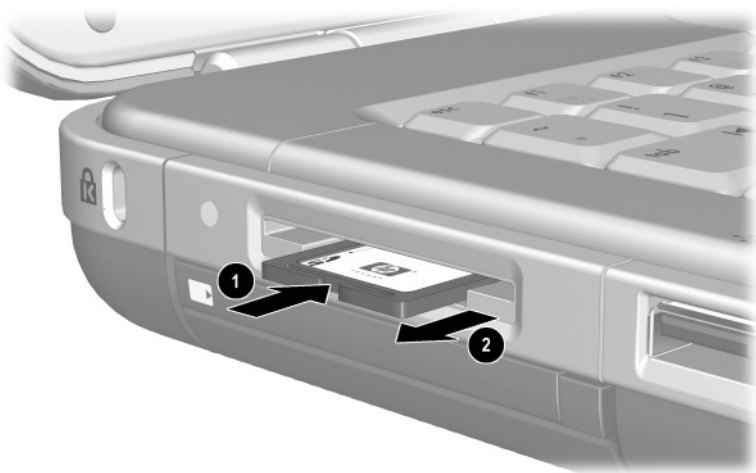

Removing a digital media card

Disabling an Optional Digital Media Card

A digital media card inserted into the Digital Media slot uses power even when the card is not in use. Disabling the card conserves power. To disable a media card:

- » Select Start > My Computer. Right-click the drive assigned to the card and then select Eject. (The card is stopped but is not released from the Digital Media slot.)

Increasing Memory

You can increase the amount of RAM (random access memory) in the notebook with an optional memory module approved by HP.

The notebook contains 2 memory slots, one of which is accessible for an optional 128-MB, 256-MB, 512-MB, or 1024-MB memory module upgrade.

Depending on the notebook model, the notebook might ship with a vacant memory slot. On other models the memory slot contains a preinstalled memory module that can be replaced at any time.

Displaying Memory Information

When RAM is increased, the operating system increases the hard drive space reserved for the Hibernation file.

If you experience problems with Hibernation after increasing RAM, verify that your hard drive has enough free space for the larger hibernation file.

- To display the amount of RAM in the system:

Select Start > Control Panel > Performance and Maintenance > System > General.

- To display both the amount of free space on your hard drive and the amount of space required by the Hibernation file.

Select Start > Control Panel > Performance and Maintenance > Power Options > Hibernate.

Removing or Inserting a Memory Module



WARNING: To prevent exposure to electrical shock, access only the memory compartment during this procedure. The hard drive bay and the memory compartment are the only user-accessible internal compartments on the notebook. All other areas that require a tool to access should be opened only by an authorized HP service provider.




WARNING: To prevent exposure to electrical shock and damage to the notebook, shut down the notebook, unplug the power cord, and remove all battery packs before installing a memory module.




CAUTION: To prevent electrostatic discharge from damaging electronic components: Before beginning this procedure, discharge yourself of static electricity by touching a grounded metal object. For more information about preventing electrostatic damage, refer to the *Regulatory and Safety Notices* guide on this CD.

1. Save your work and shut down the notebook. If you are not sure whether the notebook is off or in Hibernation, briefly press the power button. If your work returns to the screen, save your work, exit all applications, and then shut down the notebook.
2. Disconnect all external devices connected to the notebook.
3. Disconnect the power cord.
4. Remove the battery pack.

5. Turn the notebook upside down.
6. Loosen the screw that secures the memory compartment cover ❶, and then tilt and remove the cover ❷.

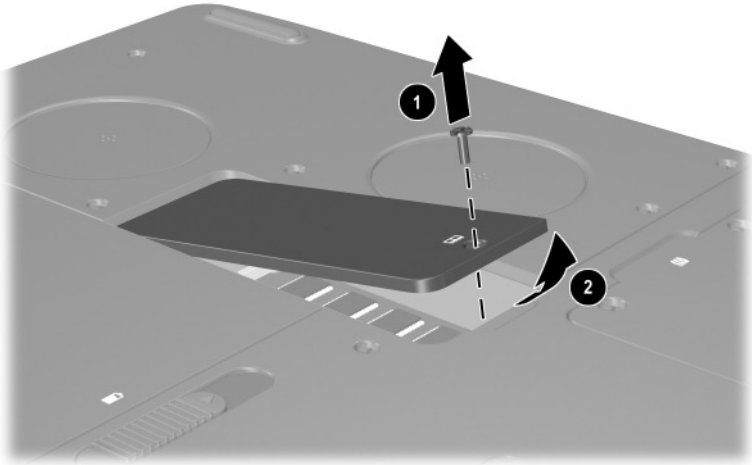

Opening the memory compartment

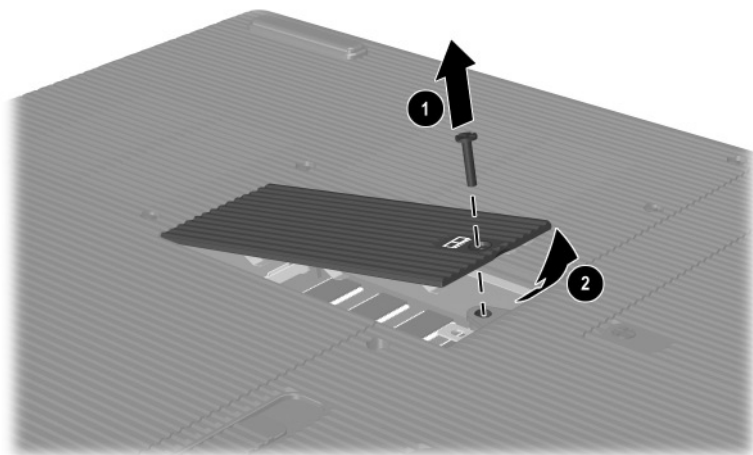


Opening the memory compartment


7. Remove or insert the memory module.

To remove a memory module:

- a. Pull away the retention clips on each side of the module ❶. (The module tilts up.)
- b. Grasp the edges of the memory module and gently pull it out of the memory slot ❷.
- c. To protect a memory module after removal, place it in an electrostatic-safe container.

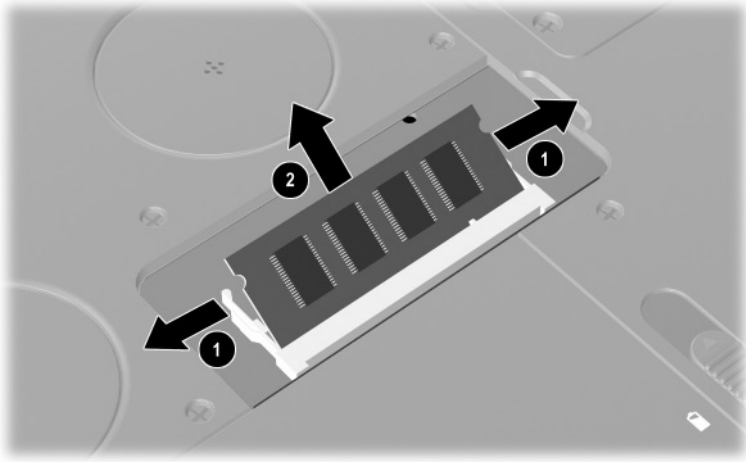


Removing a memory module

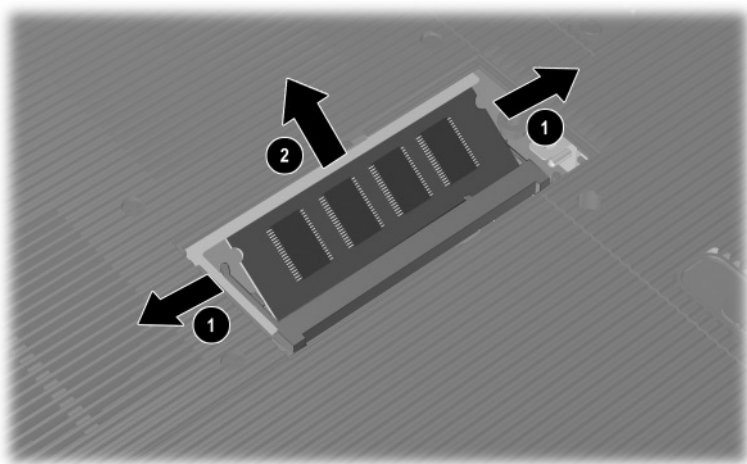


Removing a memory module

To insert a memory module:

- a. Align the keyed (notched) edge of the module with the keyed area in the expansion slot **1**.
- b. From a 45-degree angle, press the module into the slot until it is seated **2**.
- c. Press the module down until the retention clips snap into place.

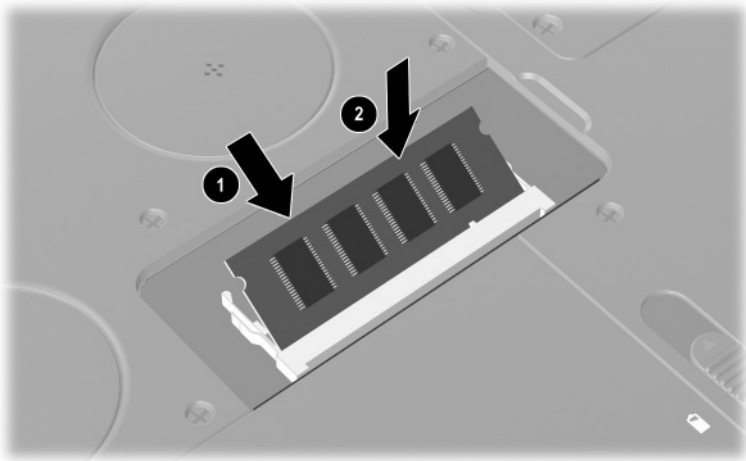


Inserting a memory module

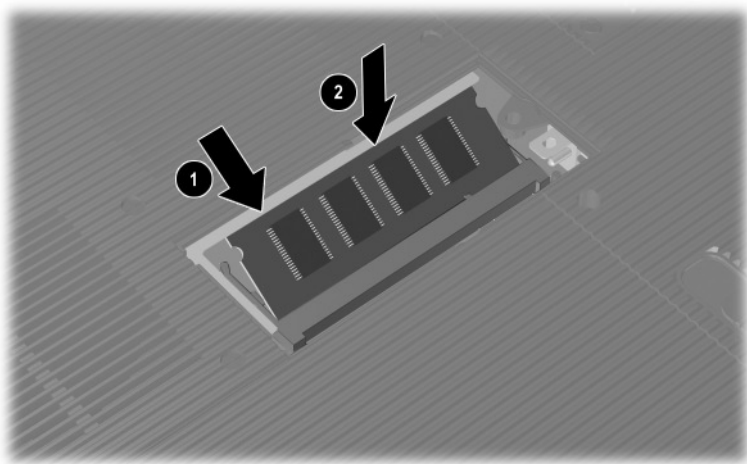


Inserting a memory module

8. Align the tabs on the memory compartment cover with the cover slots on the notebook.
9. Tilt the cover down until it is seated **1**.
10. Reinsert and tighten the screw that secures the cover to the notebook **2**.
11. Replace the battery pack, reconnect AC power, and then restart the notebook.

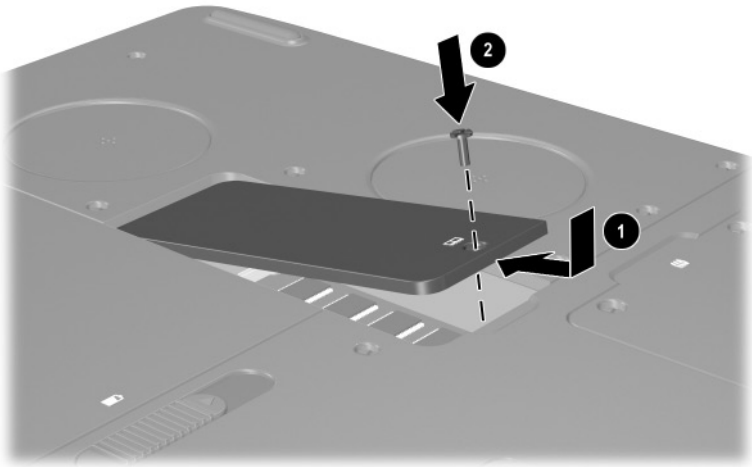

Closing the memory compartment

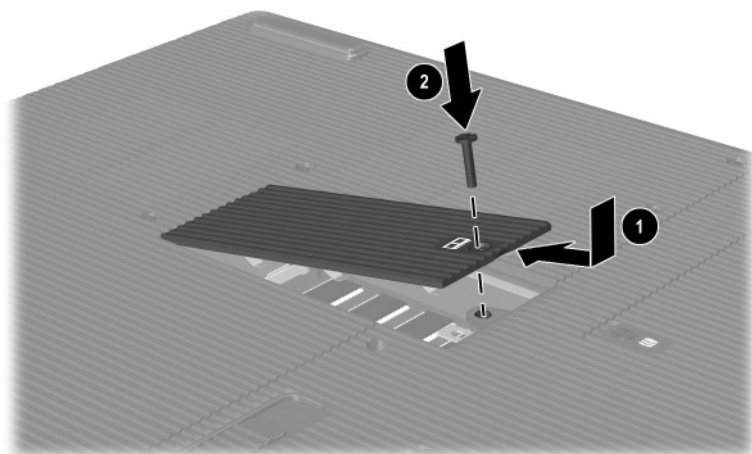


Closing the memory compartment


Replacing the Hard Drive

Remove the hard drive only for replacement. To replace the primary hard drive:

1. Save your work and shut down the notebook. If you are not sure whether the notebook is off or in Hibernation, briefly press the power button. If your work returns to the screen, save your work, exit all applications, and then shut down the notebook.
2. Disconnect all external devices connected to the notebook.
3. Disconnect the power cord or other external power source.
4. Remove any battery packs in the notebook.
5. Turn the notebook upside down.
6. Loosen the 2 hard drive assembly retaining screws ❶, and then tilt the hard drive upward ❷.

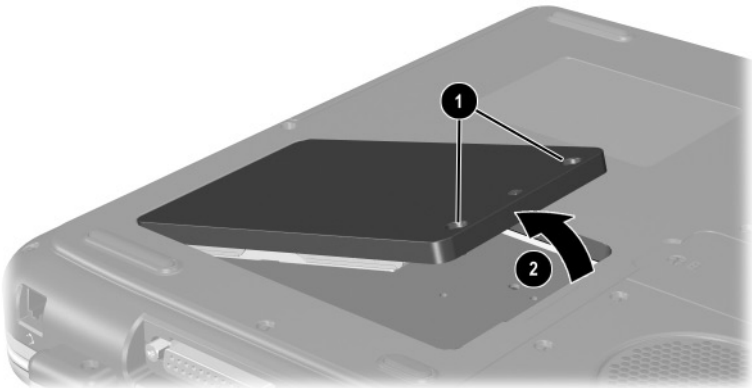


Loosening the hard drive assembly retaining screws

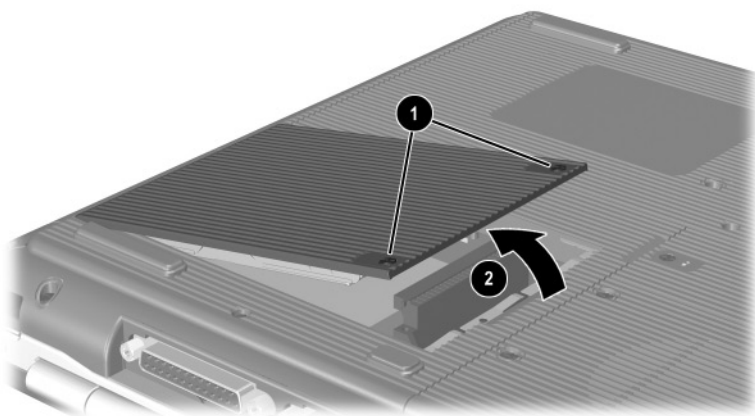


Loosening the hard drive assembly retaining screws

7. Remove the hard drive assembly from the bay.
8. Remove the 4 hard drive bracket screws **1**.
9. Remove the hard drive from the bracket **2**.

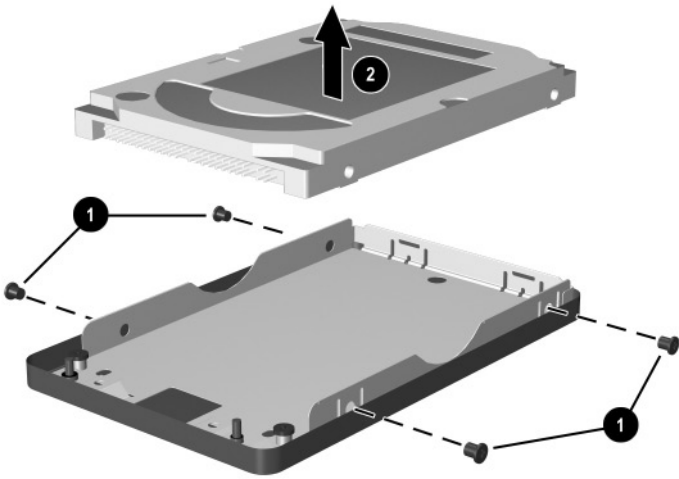


Removing the hard drive from the hard drive bracket

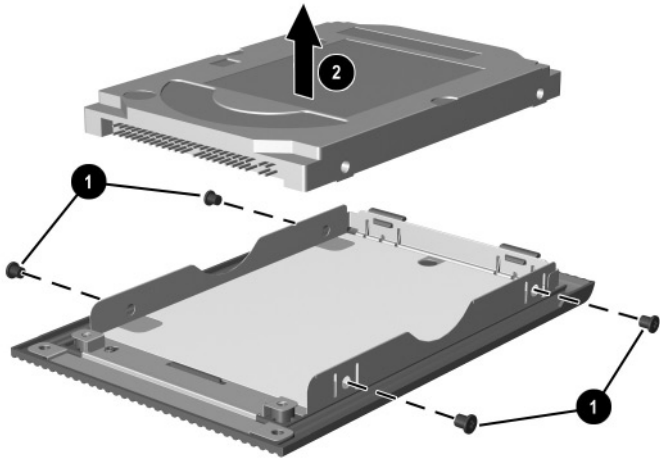


Removing the hard drive from the hard drive bracket

10. Insert the new hard drive into the hard drive bracket ❶.
11. Replace the 4 hard drive bracket screws ❷.

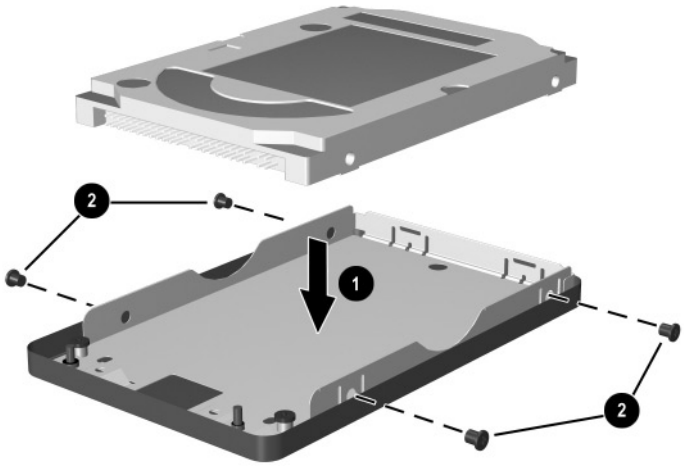


Inserting the hard drive into the hard drive bracket

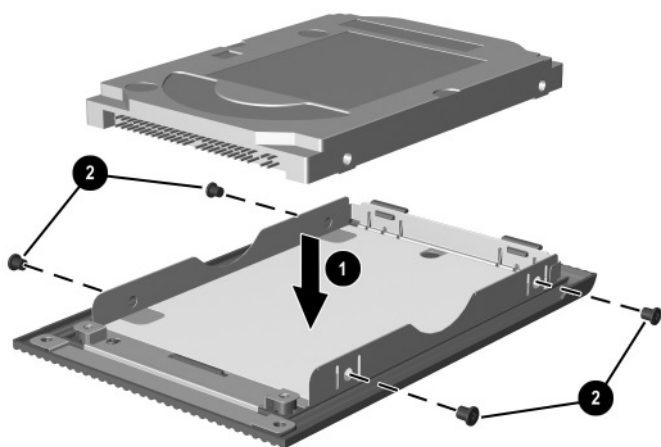


Inserting the hard drive into the hard drive bay

12. Reinsert the hard drive assembly into the hard drive bay until it is seated ❶.
13. Tighten the 2 hard drive assembly retaining screws ❷.

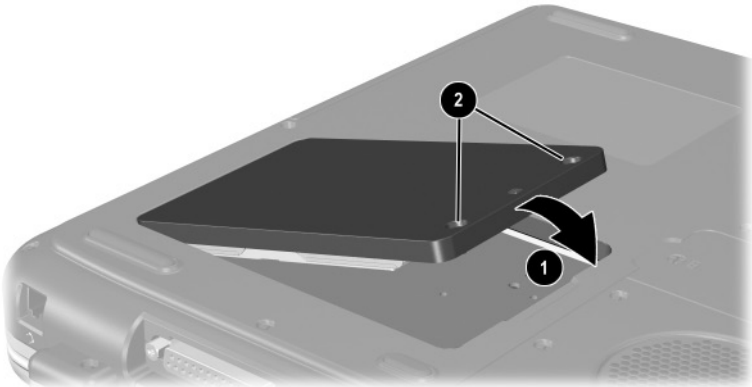

Inserting the hard drive assembly into the hard drive bay

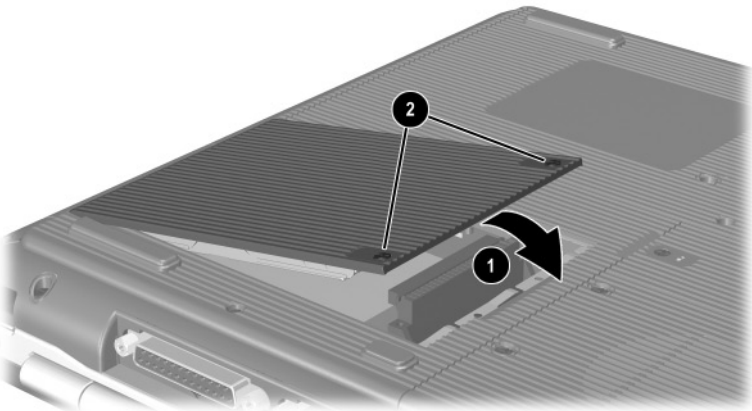

Inserting the hard drive assembly into the hard drive bay

Finding More Upgrade Information


For additional information about installing, removing, or operating an optional device, refer to the documentation included with the device.

Specifications

Operating Environment

Factor	Metric	U.S.
Temperature		
Operating	0° to 35°C (non writing optical)	32° to 95°F
	5° to 35°C (writing optical)	41° to 95°F
Nonoperating	-20° to 60°C	-4° to 140°F
Relative humidity (noncondensing)		
Operating	10% to 90%	10% to 90%
Nonoperating	5% to 95%	5% to 95%
Altitude (unpressurized)		
Operating	-15 to 3,048 m	-50 to 10,000 ft
Nonoperating	-15 to 12,192 m	-50 to 40,000 ft

Rated Input Power

Input Power	Rating
Operating voltage	100–240 VAC RMS
Operating frequency range	50 to 60 Hz AC
When powered by a DC source	18.5 Vdc 6.5 A
 This product is designed for IT power systems in Norway with phase-to-phase voltage not exceeding 240 Vrms.	

Index

A

- AC adapter
 - disconnecting 3-1
 - identifying 1-34
- adapter, modem 7-5
- airport security devices 4-3
- altitude specifications 9-1
- AT commands 7-7
- audio devices, connecting 5-4
- audio-out jack
 - connecting devices 5-6
 - location 5-4
- AutoPlay/Autorun 4-5

B

- battery bay 1-31
- battery light 1-5, 1-6, 1-17, 1-19
- battery packs
 - calibrating 3-8
 - charge displays 3-5
 - charging 3-4
 - conserving power 3-10
 - disposing of 3-12
 - inserting/removing 3-2
 - low-battery condition 3-6
 - recycling 3-12
 - storing 3-11
 - switching power sources 3-1

- battery release latch 1-30, 1-31
- blackout periods, modem 7-6
- Bluetooth wireless 7-15
- bottom components 1-30, 1-31
- buttons
 - PC Card eject 1-22, 1-24, 8-5
 - power 1-9, 1-10
 - Quick Launch 1-11
 - scroll 2-2, 2-3
 - TouchPad 2-2, 2-3
 - volume 1-9, 1-10, 1-17, 1-28, 5-1, 5-2
 - wireless 1-13, 1-19

C

- cable lock 6-7
- cables
 - audio 5-7
 - modem 1-34, 7-3
 - power 1-20, 1-21
 - security 6-7
 - S-Video 5-7
- caps lock light 1-7, 1-8
- CD-ROM drive
 - cancelling AutoPlay 4-5
 - definition 4-1
 - displaying contents 4-5
 - inserting/removing discs 4-8

Certificate of Authenticity label
1–32

connectors

1394 1–26, 1–29

expansion 1–27, 1–29

drive 4–3

external monitor 1–20, 1–21

modem 7–2

parallel 1–20, 1–21

power 1–20, 1–21

USB 1–23, 1–26, 1–29, 6–2

See also infrared port; jacks

conserving power, tips 3–10

cords 1–34

country-specific modem cable
adapter 7–5

D

digital media cards 8–6

Digital Media slot 1–22, 8–10

Digital Media slot light 1–8

disc drive. *See* optical drive

disc, definition 4–2, 4–3

disk, diskette, defined 4–2, 4–3

diskette drive

identifying 1–23

inserting/removing diskettes
4–14

display, internal

brightness 2–8, 2–9, 2–10

component location 1–1, 1–2

display switch 1–9, 1–10, 1–17

switching image to or from 2–8

See also monitor, external
(optional)

drive light 1–7, 1–8

drive media

affected by airport security 4–3

caring for 4–4

drives

affected by airport security 4–3

caring for 4–3

CD-ROM 4–1, 4–2

diskette 1–23, 1–25, 4–14

DVD+RW/R and CD-RW

combo 4–2

DVD/CD-RW combo 4–2

DVD-ROM 4–1, 4–2

hard drive 8–21

HP USB Digital Drive 1–23,
1–25, 4–2

optical 1–23

shipping 4–3

See also optical drive

DVD-ROM drive

definition 4–1

displaying contents 4–5

inserting/removing discs 4–8

E

electrostatic discharge (ESD) 8–12

expansion port 1–27, 1–29

external devices (optional)

connecting/disconnecting 6–1

infrared 6–4

USB 6–2, 6–4

F

floppy disk drive, floppy drive.

See diskette drive

Fn key, in hotkeys 2–5

function keys 1–14, 1–15, 2–5

H

hard drive

- defined 4–1
- replacing 8–21

hard drive bay

- 1–30, 1–31

hard drive, internal

- displaying amount of free space on 8–11
- space required for Hibernation file 8–11

hardware

- cords and cables 1–34
- display components 1–1, 1–2
- front components 1–16, 1–18
- left-side components 1–22, 1–24
- rear components 1–20, 1–21
- right-side components 1–26, 1–28
- top components 1–5, 1–7, 1–8
- upgrades 8–1

headphone jack 1–26, 1–28

headphones, headset (optional),
connecting 5–4

Help and Support Center 2–8

Hibernation

- avoiding when playing media 4–4
- exiting 1–9, 1–10
- initiating 1–9, 1–10
- low-battery conditions 3–7

hotkeys

- adjusting display brightness 2–8, 2–9, 2–10

- entering on external keyboard 2–8

- identifying 2–5

- initiating Standby 2–9

- media 2–10

- Quick Reference 2–7

- switching among displays 2–8

HP USB Digital Drives

- connecting to USB port 4–18
- inserting into optional Digital Bay 4–22
- inserting SD card 4–16
- installing 4–16

hub, USB 6–2

I

IDE light 1–7, 1–8, 1–16, 1–18

identifying notebook parts 1–1

infrared port

- linking to 6–4
- location 1–27, 1–29
- See also* connectors; jacks

J

jacks

- audio-out 5–4
- headphone 1–26, 1–28
- microphone 1–26, 1–29, 5–4
- RJ-11 telephone 1–20, 1–21
- RJ-45 network 1–27, 1–29, 7–8
- S-Video-out 1–27, 1–29, 5–7
- See also* connectors; infrared port

Japan-specific modem adapter
1–34

K

- keyboard light 1-7, 1-8
- keyboard, external (optional)
 - numeric keypad 2-13
 - USB connection 6-3
- keypad keys 1-14, 1-15
- keypad, numeric 2-13
- keys
 - Fn** 2-5
 - function 1-14, 1-15
 - hotkeys 2-5
 - keypad 1-14, 1-15, 2-13
 - num lock** 2-15
 - Quick Launch 1-11, 1-12, 1-13
 - Windows applications 1-12, 1-13
 - Windows logo 1-12, 1-13
 - See also* buttons

L

- labels
 - Microsoft Certificate of Authenticity 1-32
 - Modem approval 1-32
 - product identification 1-32
 - Service Tag 1-32
 - System 1-32
 - wireless certification 1-32
- LAN connection 7-7
- left-side components 1-22, 1-24
- lights
 - battery 1-5, 1-6, 1-17, 1-19
 - caps lock 1-7, 1-8
 - Digital Media slot 1-8

- IDE 1-7, 1-8, 1-16, 1-18, 4-7
- keyboard 1-7, 1-8
- num lock 1-7, 1-8, 2-15
- power 1-5, 1-6
- power/Standby 1-5, 1-6, 1-16, 1-18
- wireless on/off 1-28, 7-12
- line-out jack. *See* audio-out jack
- lock, security cable (optional) 6-7

M

- media hotkeys 2-10
- media, drive
 - affected by airport security 4-3
 - caring for 4-3, 4-4
 - displaying contents of 4-5
 - inserting/removing CD or DVD 4-8
 - types and terms 4-2
- memory
 - compartment location 1-30, 1-31
 - displaying amount of 8-11
- Memory Stick 8-6
- Memory Stick Pro 8-6
- microphone jack 1-26, 1-29
- microphone, external 5-4, 5-5
- Microsoft Certificate of Authenticity label 1-32
- modem
 - AT commands 7-7
 - blackout periods 7-6
 - cable 1-34, 7-3
 - configuring 7-6
 - connecting 7-2

country-specific adapter 1–34,
7–5
settings 7–6
Modem approval label 1–32
modem cable 1–34
monitor, external (optional)
connector 1–20, 1–21
switching display to or from
2–8
MultiMediaCard 8–6

N

NTSC television format 5–9
num lock 2–15, 2–17
num lock light 1–7, 1–8
number
Product Key 1–32
serial 1–32
numeric keypad
switching key functions 2–17
turning on and off 2–15

O

operating system, Product Key
1–32
optical drive
AutoPlay 4–5
avoiding Standby and
Hibernation with 4–4
cancelling AutoPlay 4–5
inserting/removing media 4–8
types available 4–1
using media hotkeys with 2–10
See also media, drive
optical drive bay configurations
1–23, 1–25
overhead projector (optional)

external monitor connector
1–20, 1–21
switching display to or from
2–8

P

PAL, PAL-M television formats
5–9
parallel connector, identifying
1–20, 1–21
PC Card
component locations 1–22,
1–24
configuring 8–2
functions 8–2
increasing RAM 8–11
inserting/removing 8–3
peripherals. *See* external devices
(optional)
pointing devices
setting preferences 2–4
TouchPad 2–2, 2–3
power
conserving 3–10
light 1–5, 1–6
Power Options window 3–6
rated input 9–2
resolving low-battery
conditions 3–7
switching between AC and
battery 3–1
power button 1–9, 1–10
power cord 1–34
power/Standby light 1–6, 1–16,
1–18
Product Key 1–32

Q

- Quick Launch buttons
 - assigning 2–12
 - function 1–11

R

- RAM (Random Access Memory) 8–11
- regulatory information
 - Modem approval label 1–32
 - System label 1–32
 - wireless certification label 1–32
- right-side components 1–26, 1–28
- RJ-11 telephone jack
 - location 1–20
 - modem cable 7–3
 - purpose 1–21, 1–34
- RJ-45 network jack
 - connection status 7–8
 - location 1–27, 1–29

S

- scroll button 2–2, 2–3
- Secure Digital (SD) 8–6
- security cable slot 1–22, 1–24
- security features 6–7
- security, PC Smart Card Reader (optional) 8–2
- serial number 1–32
- Service Tag label 1–32
- sleep button. *See* Standby
- SmartMedia 8–6

software

- AutoPlay/Autorun/auto insert notification 4–5
- infrared 6–4
- USB support 6–3
- speakers 5–3
 - external (optional) 5–4
 - internal stereo 1–17, 1–18
- Standby
 - avoiding when playing media 4–4
 - avoiding with infrared 6–6
 - exiting 1–9, 1–10, 2–9
 - initiating 2–9
 - power/Standby light 1–5, 1–6, 1–16
- S-Video cable, connecting video 5–7
- S-Video-out jack 1–27, 1–29, 5–7
- system label 1–32

T

- television (optional)
 - changing color format 5–9
 - connecting audio 5–4
- temperature, operating 9–1
- top components 1–5
- TouchPad. *See* pointing devices
- traveling with notebook
 - battery pack temperature 3–11
 - environmental specifications 9–1
 - Modem approval label 1–32
 - serial number 1–32
 - wireless certification label 1–32

U

USB connectors 1–23, 1–26, 1–29

USB devices (optional)

connecting 6–2

enabling 6–3

V

VCR (optional), audio-out jack

function 5–4

vents 1–20, 1–21, 1–22, 1–30,
1–31

video device

connecting audio 5–7

S-Video-out jack 5–8

turning on and off 5–9

volume, adjusting 5–1

W

Windows applications key 1–12,
1–13

Windows logo key 1–12

wireless antenna 7–10

wireless certification label 1–32

wireless device

connecting LAN 7–7

turning on and off 7–12

wireless indicator light 1–28, 7–12

Wireless On/Off button 1–13,
1–19, 7–12